



Original

Installation And Service Manual

SLIDING JACKS

Model: J5H

Cargo Claims

If there is any missing or damaged product during transportation, the buyer must notate on the shipping paperwork or refuse the shipment. NOTATE ALL DAMAGE OR REFUSE DAMAGED SHIPMENT!

DANGER

Read the entire contents of this manual before using this product. Failure to follow instructions and safety precautions could result in serious injury or even death. Make sure all other operators also read this manual. Keep this manual near the machine so that it can be seen by all users. By proceeding with installation and operation, you agree that you are fully understand the contents of this manual and take full responsibility for the use of the product.

CONTENTS

PROFILE.....	1
IMPORTANT SAFETY INSTRUCTIONS.....	2
I. PRODUCT FEATURES AND SPECIFICATIONS.....	4
II. STORAGE AND INSTALLATION REQUIREMENT.....	6
III. INSTALLATION STEPS.....	6
IV. MAINTENANCE SCHEDULE.....	10
V. TROUBLE SHOOTING.....	11
VI. EXPLODED VIEW.....	12
VII.CAR LIFT SAFETY TIPS	15
VIII.LIFT DISPOSAL	15

PROFILE

This instruction manual is specially prepared for you. Your new lift is the product of over a decade of continuous research, testing and development and is the most technologically advanced lift on the market today.

Please make sure to read through this manual before operating the lift.

Record the information on the nameplate label here:

Model No.: _____

Serial No.: _____

Manufacturer date: _____

WARRANTY

The warranty period for the steel structure part of new car lift is 5 years, hydraulic components, bronze bushings, sliders and plastic parts are under warranty for 3 years, and electrical components warranty for 2 years. During the warranty period, the manufacturer will repair or replace the defective parts free of charge including shipping costs.

This warranty does not cover damage caused by normal wear and tear, improper use, damage in transit, or damage caused by lack of maintenance.

This warranty is unique and supersedes what is expressed and implied in all other warranties. The manufacturer shall not be liable for any particular, indirect or accidental damage resulting in breach of or delay in the execution of the warranty. The manufacturer reserves the right to design and improve the product and has no obligation to make notice of the changes in advance.

The product warranty based on the above clause is based on the model number and serial number of the equipment. This information must be provided in conjunction with all warranty information at the time of service and warranty

IMPORTANT SAFETY INSTRUCTIONS

Please read this safety instructions entirely in first!

In order to properly maintain your product and ensure operator safety, it is the responsibility of the product owner to read and follow these instructions!

1. Read explicitly and understand all safety warnings before operating the lift.
2. Keep your hands and feet away from the machine. Keep hands and feet away from any moving parts. Keep your feet away from the lift as it descends to avoid pressing on pointed objects.
3. Keep the work area clean. A cluttered workspace can lead to injuries.
4. Do not use the equipment in wet and rainy places, keep it away from the rain, keep the working area well lit.
5. Only trained operators are allowed to handle the lift machine. All untrained persons must stay away from the workplace. Never allow untrained persons to handle or operate the machine.
6. Use the lift properly. Use the lift in the correct way.
7. Warning! Keep persons and objects from the lift when lifting the a vehicle.
8. If the vehicle is at risk of falling, make sure no one is around the lift.
9. Before preparing to approach or service the vehicle, ensure that the safety device is in effect.
10. Dress appropriately when operating machines, and consider wearing non-slip steel-toe shoes for added safety..
11. Beware of electric shock. In order to protect the operator from electric shock, the lift in use must be grounded. Do not connect the green wire to the terminal. This is the ground wire.
12. Danger! The power supply used in this type of lift has high voltage. Please disconnect the power supply before any circuit repair. Unplug in case the power supply is accidentally switched on during maintenance.
13. Warning! There is a risk of explosion. There are parts in the equipment that produce arc light and spark. Do not operate near flammable gas. This machine should not be placed in the lounge or basement.


14. Maintain with care. Keep the machine clean for better and safer operation. Perform proper lubrication and maintenance procedures according to the manual. Keep handles or buttons clean, dry, and free of oil.
15. Stay alert. Use common sense to observe what you are doing.
16. Check damages parts. Check moving parts, damaged parts or anything that affects their operation. Do not use the machine if any part is damaged.
17. Do not remove any safety part from the machine. Do not use the machine once the safety part damaged.

! This symbol indicates important safety instructions that, if not followed, could endanger the safety of persons or properties, cause serious personal injury. Please read and follow all instructions in this manual before operating the machine.

In order to protect the safety of personnel and equipment, only trained and competent operators are allowed to touch and use the machine if they are fully aware of the use procedures, potential hazards, and scope of use of the machine. The machine is not designed to be used alone, or to lift other machines or transport personnel.

I. PRODUCT FEATURE AND SPECIFICATIONS

- Self-locking safety mechanism: dual safety lock device & mechanical lock.
- Easy operation.
- Can be used separately or work with four post parking lift.
- Drop in rubber pads with 2.5" extension adapters.

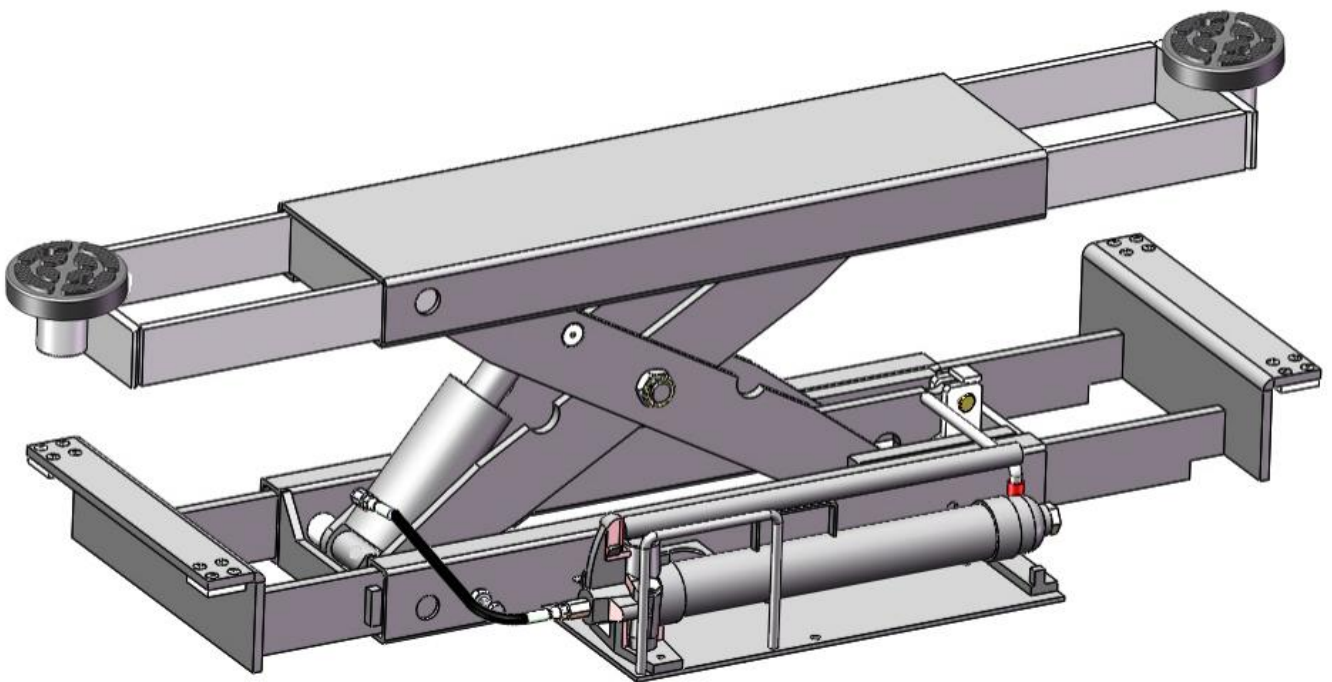

J5H

Fig.1

Measurement Image

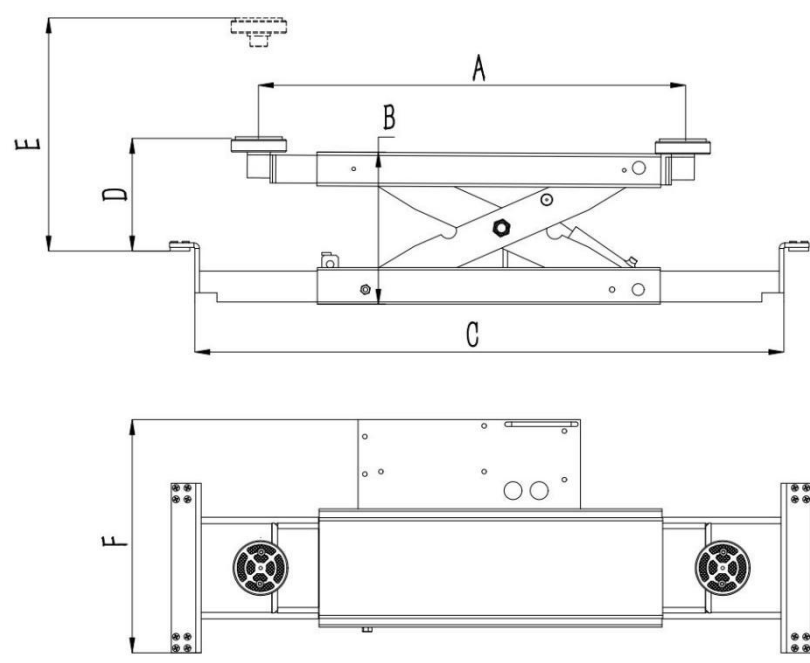


Fig.2

Specifications

Model	Lifting capacity	A	B	C	D	E		F	Pump
		Arm Pads Reach	Min. Height	Support Base Width	Min. Rubber pad height	Max Lifting Height (without adapters)	Max Lifting Height (with adapters)	Overall Width	
J5H	5000 lbs	33"-53 7/16"	8 5/8"	35 5/8"- 50" 3/16"	5 1/4"	14 3/16"	16 3/4"	20 1/16"	Hand pump

II.Storage and Installation

1. Requirements.

- 1.1. Store the equipment in a dry, non-moldy, non-flammable environment.;
- 1.2. The lift is only approved for indoor installation and use, and outdoor installation is prohibited;
- 1.3. When installing the device, take safety precautions according to the instructions to avoid device damage;
- 1.4. Do not install the device outdoors if the installation area is not protected;
- 1.5. After installation, the whole machine should be checked to make sure that every component is working properly;
- 1.6. Ensure that only authorized personnel are allowed to operate the equipment. All installation and maintenance must be carried out by an authorized and qualified technician. Do not make any change to the equipment.

2. The equipment should be unloaded and transferred by forklift or lifting crane.

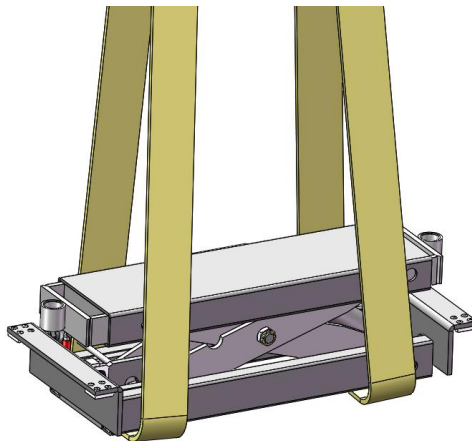


Fig.3

III.Installation steps

1. Check the parts before assembly, confirm all the parts are prepared.

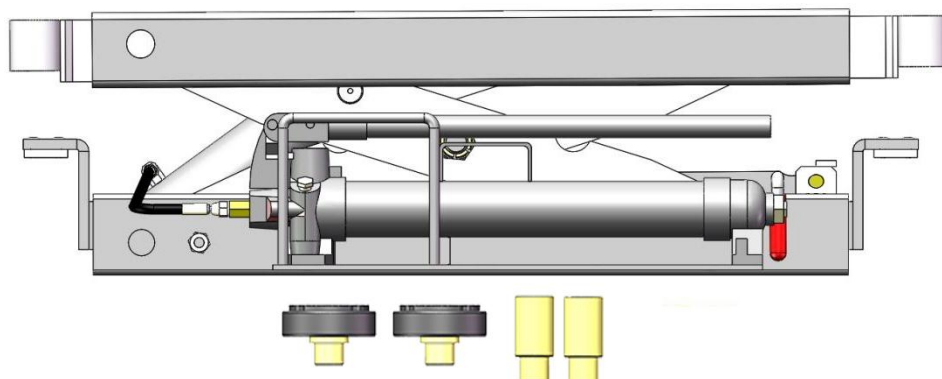


Fig.4

2. Equipment installation

2.1 The extendable lower sliding are telescoped to shortest fully. See Fig 5. The limit screws which on both sides of the extendable lower sliding should be loosen before installation.


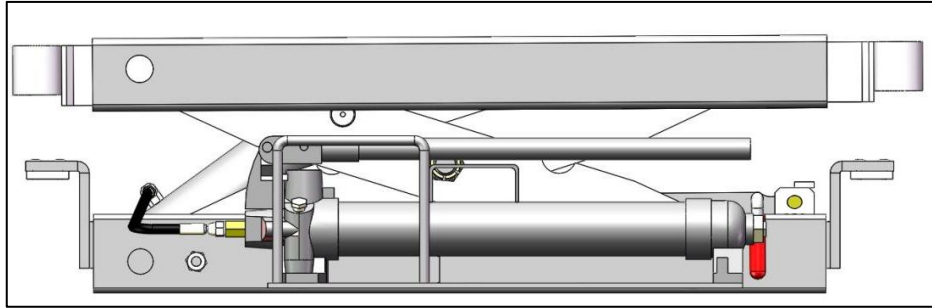


Fig.5


Limit screw

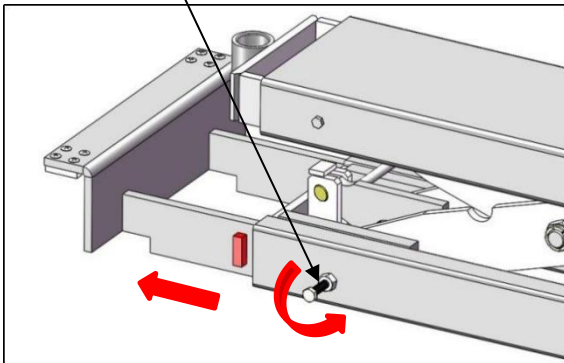

1. Loosen the limit screw and pull out the extendable lower sliding.

Fig.6

Limit block

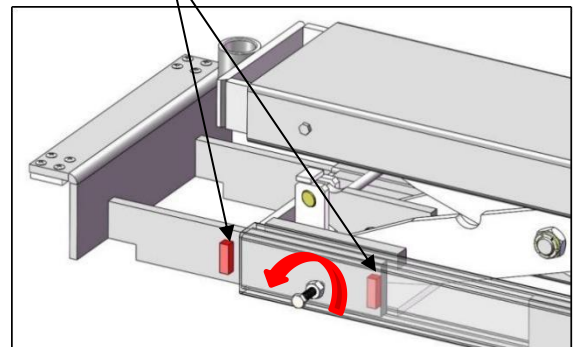

2. Adjust the extendable lower sliding to ensure limit screw is between two limit blocks, and then tighten the limit screw. Do not tighten it completely, since the extendable lower sliding should be adjustable flexibly.

Fig.7

2.2 Make sure the 4-post lift is fully lowered or stuck on the safety lock.

2.3 Adjust the extendable lower sliding according to the distance between the two platform.

2.4 Use the hoist crane, forklift or other lifting equipment to lift the sliding jack onto the four post lift, make the slider blocks lie on the platforms.


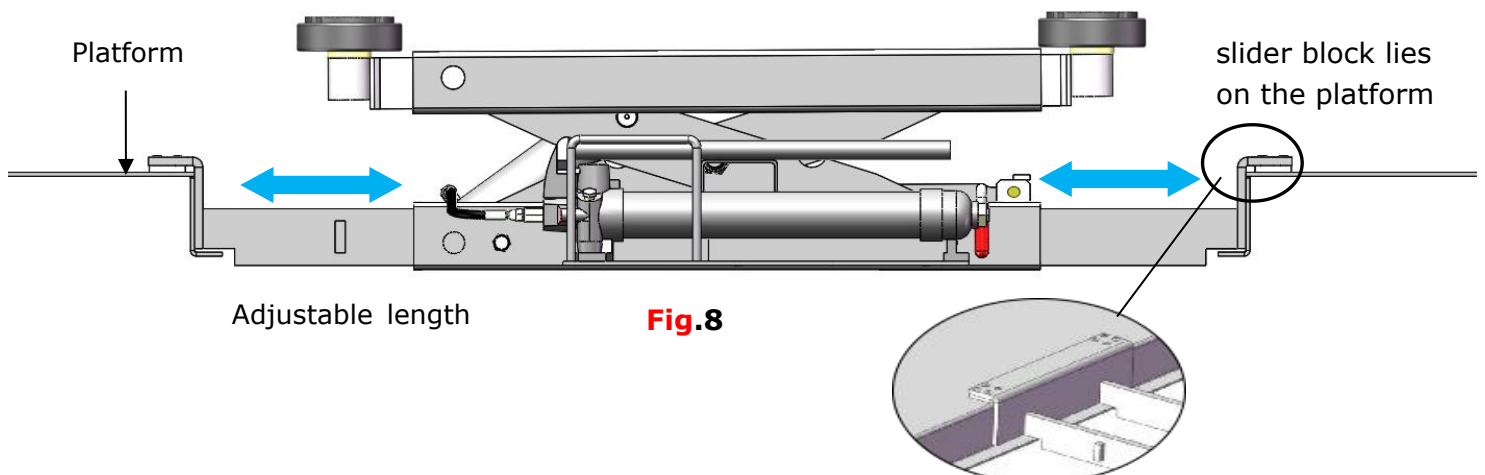


Fig.8

3. Operation instruction

3.1 Lifting operation of J5H

A. After installation, tighten the release rod in clockwise direction and loosen the white exhaust screw at the end of hand pump in counterclockwise direction for about 1 turn. Then pump the hand pump operation handle to raise the jack.

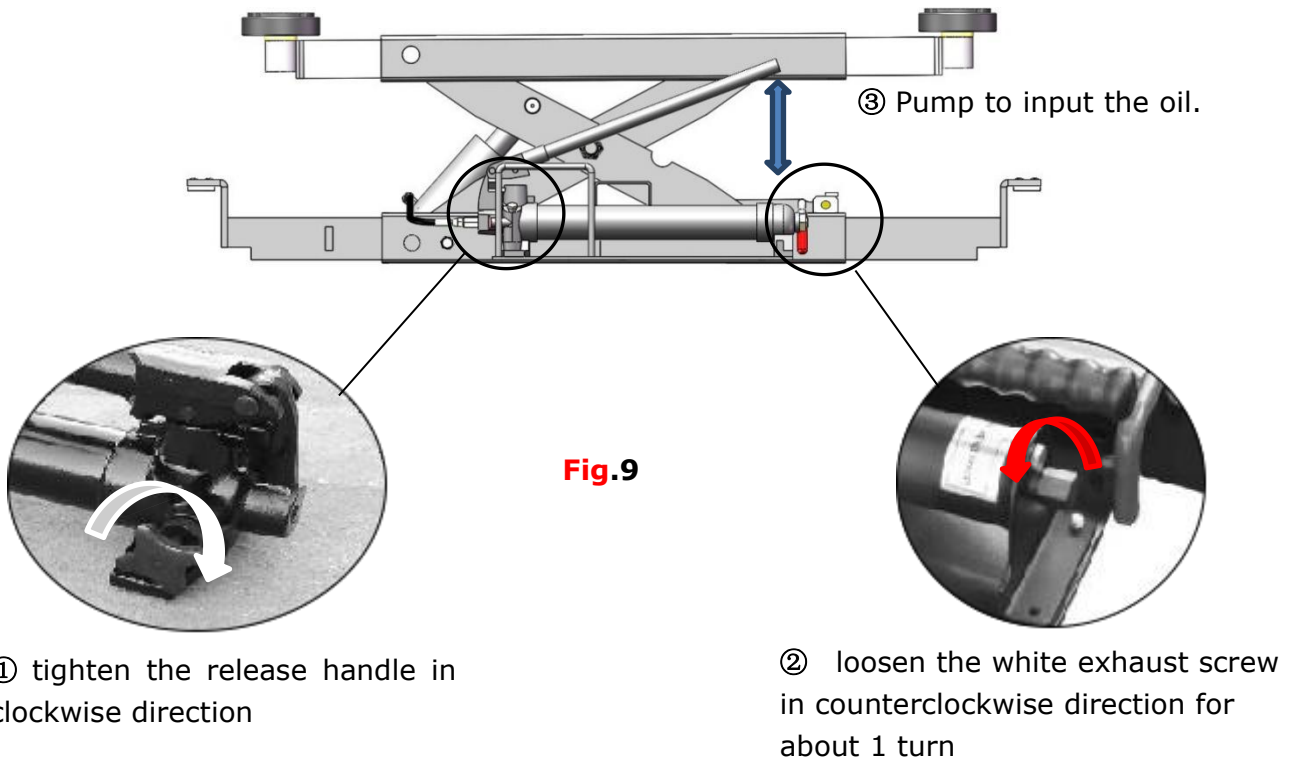

B. When the sliding jack reaches the appropriate working height, lock it at the nearest safety lock. Make sure the lock is activated before repair operation carried out.

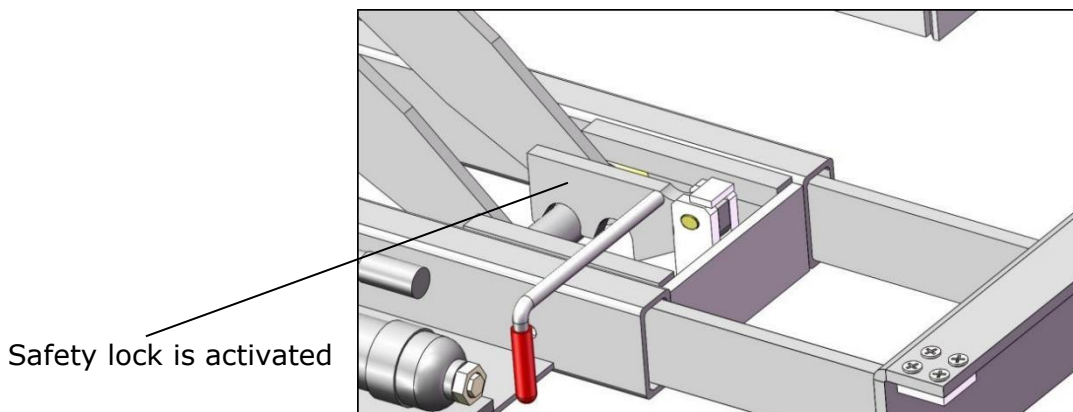


Fig.10

3.2 Descending operation of J5H

A. Pump operation handle to raise the jack for few seconds till the safety block completely out of safety lock position, then stop pumping.


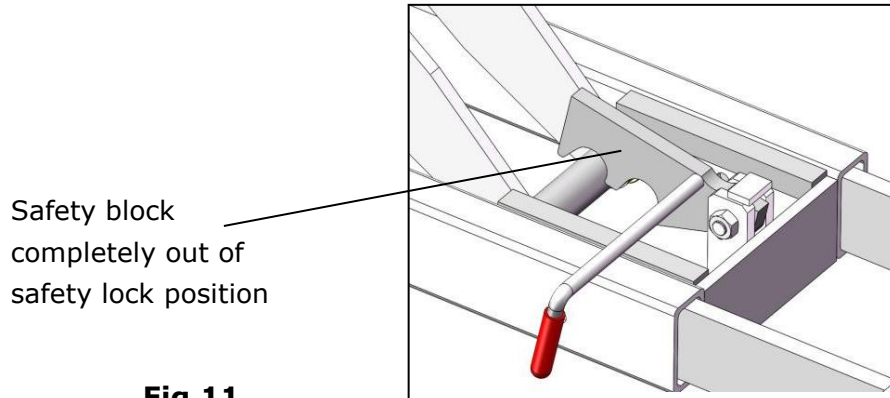



Fig.11

B. Turn up the safety block handle to release the safety lock, and rotate the release rod in counterclockwise direction to descend the jack. Re-tighten the release rod after the Jack fully descends.

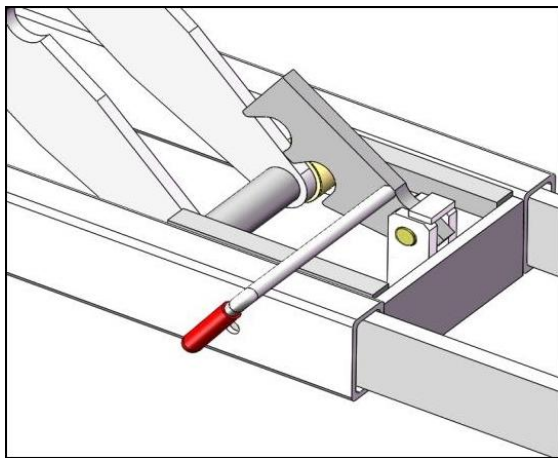

① Turn up the safety lock first.

Fig.12

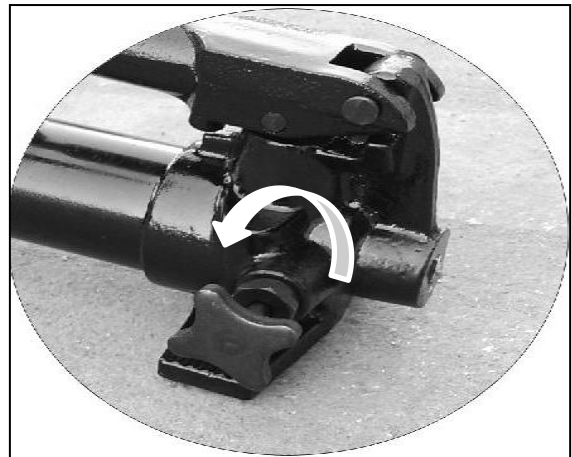

② rotate the release rod in counterclockwise direction to descend the jack

Fig.13

IV. MAINTENANCE SCHEDULE

Keep the Rolling Jack clean; wipe all spills. Do not let dirt get into the hydraulic system.

1. Daily:

- Make a visual inspection of all moving parts and check for damage or excessive wear. Replace any damaged or worn parts before setting the Jack back into service.
- Ensure that safety locks are in good working status. Do not use your Rolling Jack if the safety lock is damaged, over-worn, or out of place.
- Inspect rubber pads for damage or excessive wear.

2. Weekly:

- Lubricate all rollers and connecting pin with oil or WD-40.
- Check all oil hose connections, bolts, and pins to ensure no abnormalities.
- Check the cylinder connection bolt (tighten the bolt if necessary).

3. Monthly:

- Check the hydraulic oil of the pneumatic hydraulic pump, and refill it if required
- Lubricate running friction parts with grease.

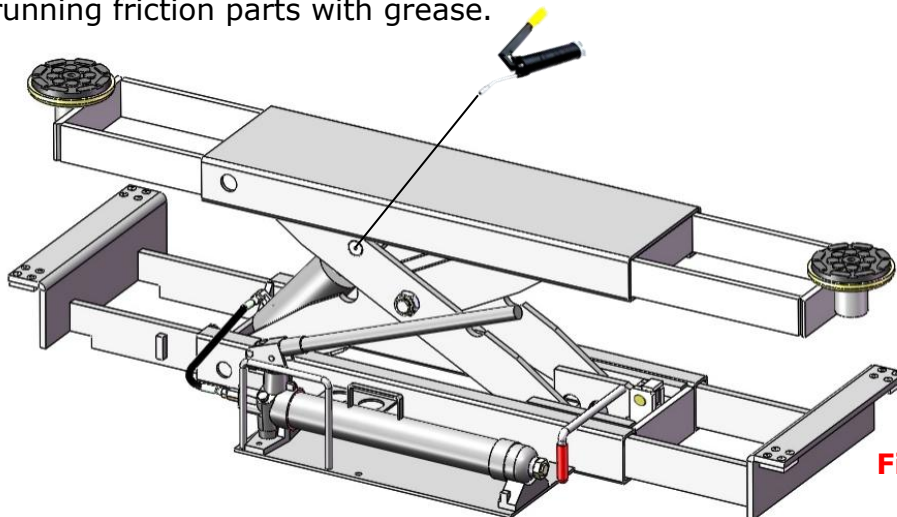


Fig.14

4. To maintenance Hydraulic Oil

A. Replace the hydraulic oil every 350 hours. The oil change period should be appropriately shortened, if used in a dirty environment;

B. Remove the tank cover when changing oil, to throw out the deteriorated and dirty hydraulic oil, and then put the pump body and the tank into a clean container with clean diesel or kerosene for washing, and finally dry it with compressed air. Reassemble the tank with good quality, cleanly 32# hydraulic oil.

C. Waste hydraulic oil used by the equipment can not be thrown into regular trash or dumped in the environment. It pollutes the environment and is illegal. Instead, take it to a recycling center. Used/dirty hydraulic oil can be cleaned and re-used.

V. TROUBLE SHOOTING

TROUBLE	CAUSE	REMEDY
Jack raises slowly or descent slowly	<ol style="list-style-type: none"> 1. Low oil level 2. Oil line leakage 3. Dirty hydraulic oil 4. Oil line is jammed 5. Overload lifting 6. Release rod not tightened or damaged 	<ol style="list-style-type: none"> 1. Fill in the tank 2. Check the oil connection and the fittings are tighten 3. Check the oil, replace and clean hydraulic system 4. Clean the oil line 5. Check load 6. Tighten or replace.
Lift does not stay up	<ol style="list-style-type: none"> 1. Oil line leakage 2. Dirty hydraulic oil 3. Cylinder leaks 4. Release rod not tightened 	<ol style="list-style-type: none"> 1. Check the oil connection and tighten the fittings 2. Check the oil, replace and clean hydraulic system 3. Replace oil cylinder seal 4. Tighten
Lift cannot lower	<ol style="list-style-type: none"> 1. Safety device are engaged 2. Release rod not loosen. 	<ol style="list-style-type: none"> 1. Re-operate 2. Re-operate

VI. EXPLODED VIEW

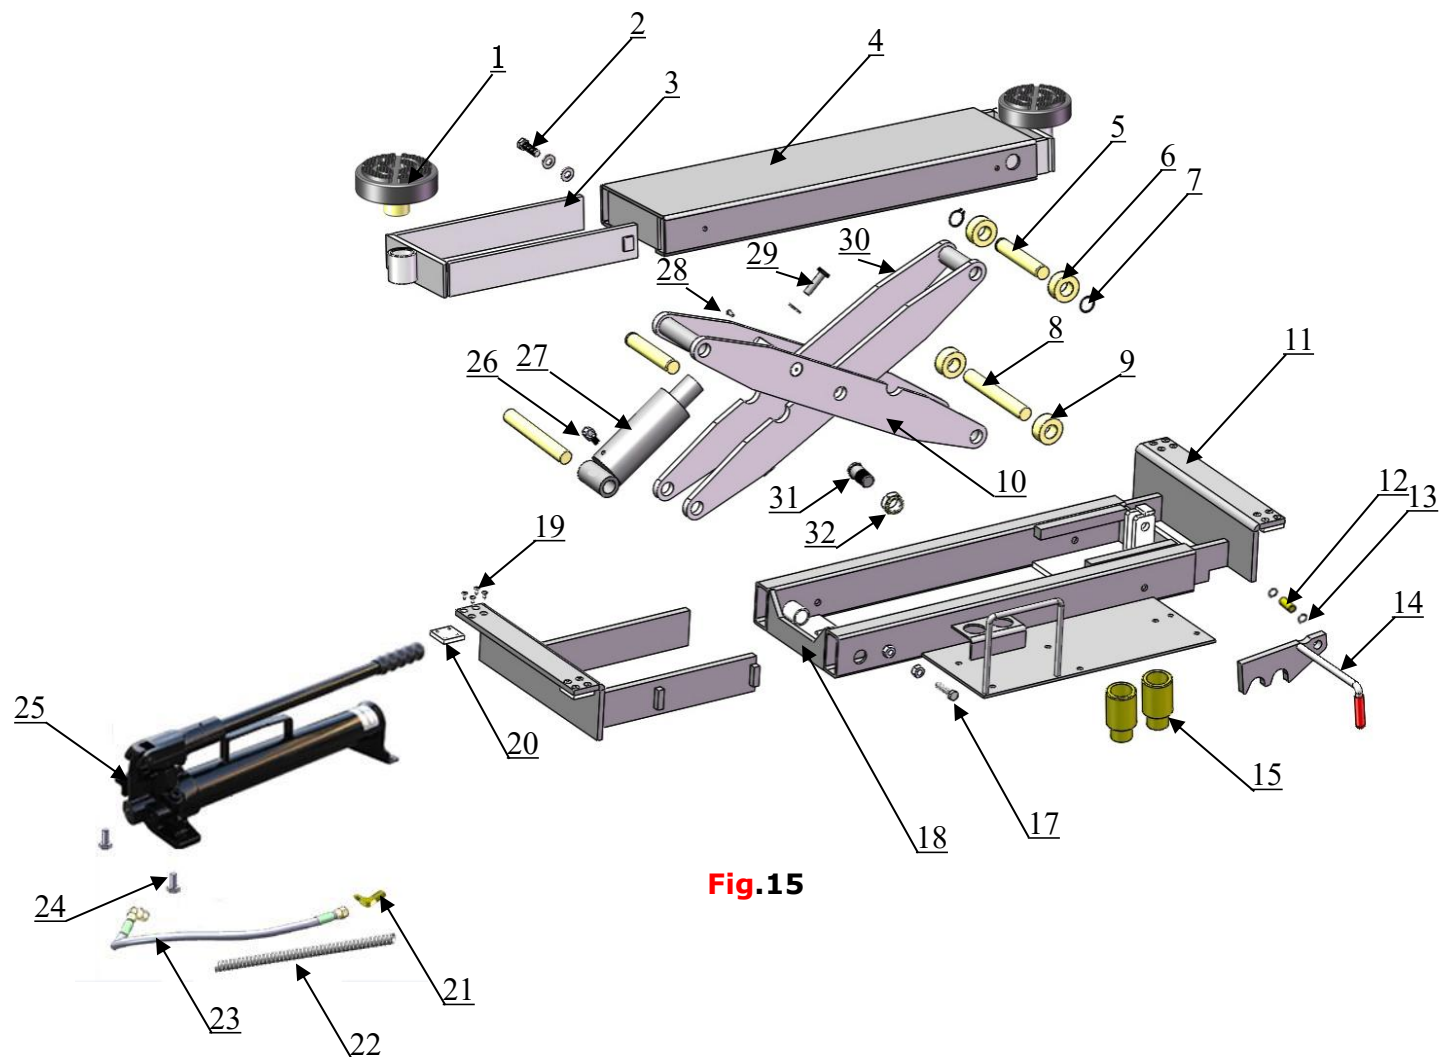


Fig.15

Exploded view of cylinder

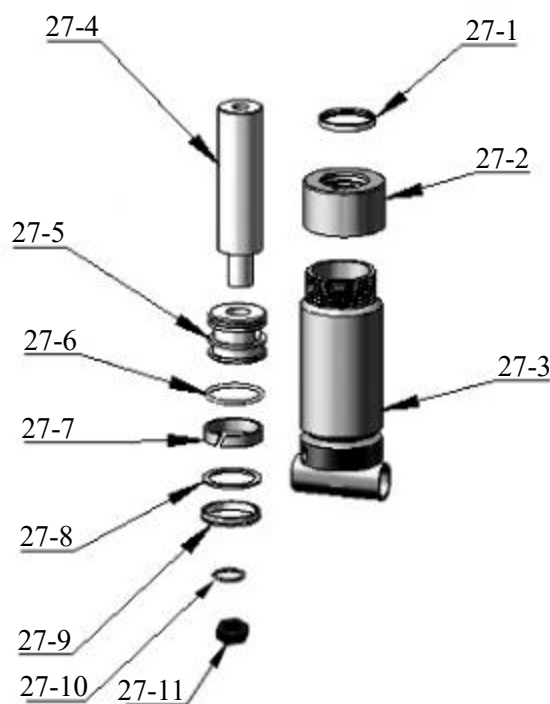


Fig.16

Rolling Jack parts list

Item	Part No.	Description	QTY
1	1102074026C	Rubber pad assembly	2
2	1005134004	Hex bolt M8*16 (include $\phi 8$ flat washer, $\phi 8$ lock washer)	2
3	11600039	Extendable arm frame	2
4	11600038	Upper support	1
5	11600036	Pin for upper roller	1
6	11600035	Upper roller	2
7	10206032	$\Phi 25$ clip ring	2
8	11680011	Pin for lower roller	2
9	10680009	Roller	2
10	11600033	Outer scissor	1
11	11600004-01	Extendable lower sliding	2
12	11680083	Pin for safety device	1
13	10420037	$\Phi 16$ clip ring	2
14	11600043	Safety device	1
15	10209052B-01	Stackable extension adapter 2.5"	2
17	1005014003	Hex bolt M10*35 (include M10 nut)	2
18	11600044-01	Base	1
19	10600042	Flat head self-tapping screw	16
20	10680059	Slider block	4
21	10420097	90° fitting	1
22	1005034001-01	Wave tube $\phi 25.5 \times \phi 20 \times 14 \frac{3}{16}$ "	1
23	10680088	Oil hose assy. 1/4*13"	1
24	10209043	Hex bolt	4
25	10690002	Hand pump	1
26	10420097	90° fitting	1
27	10600030	Cylinder	1
28	10620064	Greasing fitting	2
29	1005134008	Hex bolt M12*70 (include $\phi 12$ flat washer)	1
30	11600034	Inner scissors	1
31	11680032-01	Connecting Pin	1
32	10620022	Nylok nut M24	2

PARTS FOR HYDRAULIC CYLINDER

Item	Part No.	Description	QTY
27-1	10209078	Dust Ring $\Phi 38 \times \Phi 46 \times (5 \sim 6.5)$	1
27-2	11670006	Head Cap	1
27-3	11670011	Bore Weldment	1
27-4	11670008	Piston Rod	1
27-5	11670009	Piston	1
27-6	10201031	O Ring $\Phi 56 \times 3.55$	1
27-7	10201029	Support Ring $\Phi 57 \times \Phi 63 \times 12.5 \times 3$	1
27-8	10201030	Y Ring OSI $\Phi 57 \times \Phi 63 \times 6$	1
27-9	10201030A	Support Ring $\Phi 53 \times \Phi 63 \times 3$	1
27-10	10206069	O Ring $\Phi 21 \times 3.1$	1
27-11	10206071	Hex Nut M20*2	1

VII. Car lift safety tips

Put this safety tips in a place where you can always alert the operator. Please reference to the lift manufacturer's manual for specific information about the lift.

1. Check the lift daily. If the machine breaks down or has damaged parts, do not operate, and use the parts of original equipment to repair.
2. Do not overload the lift. The rated weight of the manufacturer design is indicated on the label of the lift.
3. Position control of the vehicle and operation of the lift can only be done by a trained and authorized person.
4. You can not lift a car with people inside. When the lift is working, the customer or other people should not be around the machine.
5. Keep the place around the lift without obstacles, lubricants, grease, garbage and other debris for a long time.
6. Carefully drive the car onto the lift, and the lift should raise to the required height for operation. **Note**, if you are working under a car, raise the lift high enough and make sure the safety mechanism has locked the machine.
7. Note, removing(or installing) parts from a car can cause a sudden shift of gravity that unstable the raised car. Reference to the car manufacturer's service manual as a recommended procedure when removing parts from the car.
8. Before the lift drops, make sure that the tool tray, tool rack, etc. are removed under the car.

VIII. Lift disposal.

When the car lift cannot meet the requirements for normal use and needs to be disposed, it should follow local laws and regulations.



Address:

SC Division: 1931 Joe Rogers Jr Blvd, Manning, SC 29102, USA

TX Division: 4310 Adler Dr., Suite #200, Dallas, TX 75211, USA

<http://www.amgohyd.com>

Manual No.: **72267805**
Revision Date: **2025/02**