



**AMGO**  <sup>®</sup> **Hydraulics**

Original

# Installation And Service Manual

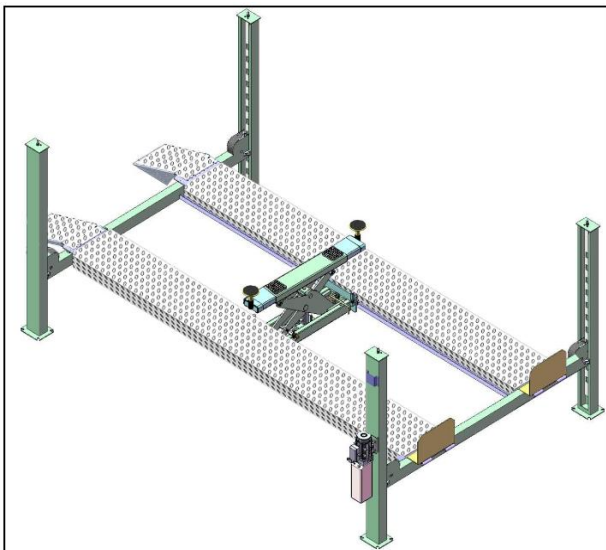

**PRO-14 PRO-14E**

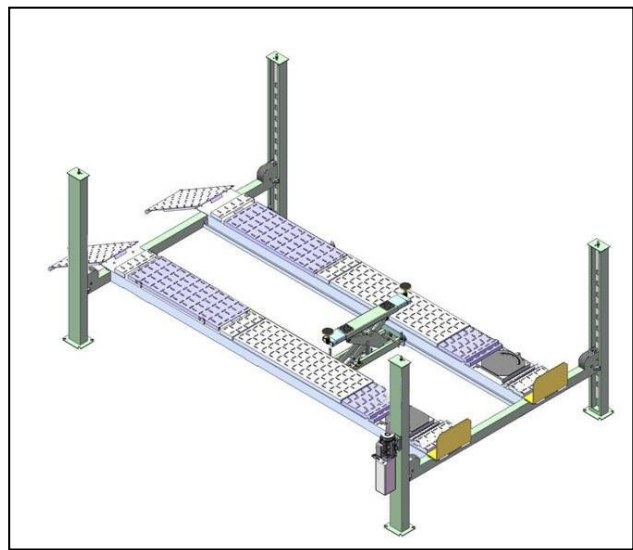

**PRO-14A PRO-14AE**

**FOUR POST LIFT  
PRO-14 PRO-14E  
PRO-14A PRO-14AE**


# CONTENTS

Product Features and Specifications .....	1
Installation Requirement .....	2
Steps of Installation .....	4
Exploded View .....	23
Test Run .....	32
Operation Instruction .....	33
Maintenance .....	33
Trouble Shooting .....	35
Lift Disposal.....	35


# I. PRODUCT FEATURES AND SPECIFICATIONS

## FEATURES

- Manual control system.
- Mechanical self-lock and air-drive safety release.
- Electric hydraulic power system, cable-drive.
- Strengthen and non-skid diamond platforms.
- Multiple turnplate pockets fit with different wheel base.
- Adjustable platform and adjustable safety lock ladders.
- Optional Jack: With hand pump/Air-operated hydraulic pump/Controlled by power unit.
- Optional Turnplate (only for PRO-14A PRO-14AE)

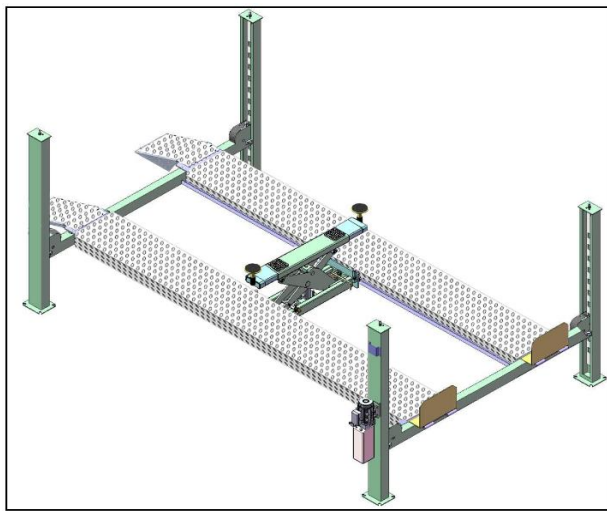

**PRO-14 PRO-14E  
Fig.1**

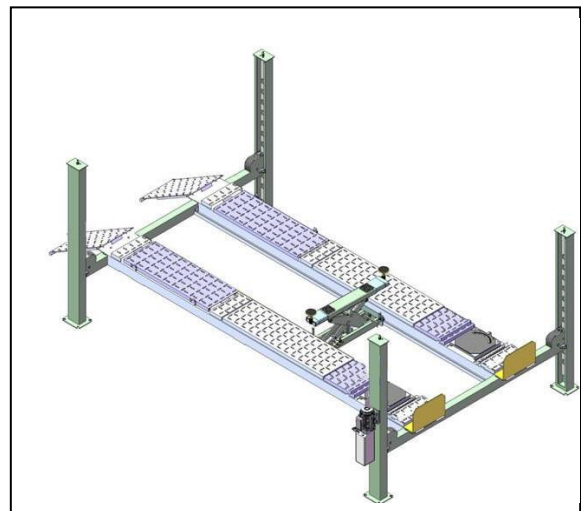

**PRO-14A PRO-14AE  
Fig.2**

## MODEL SPECIFICATIONS

Model	Lifting Capacity	Lifting Height	Lifting Time	Overall Length (Inc. Ramps)	Overall Width	Width Between Columns	Motor
PRO-14	14000LBS	73-1/2"	81S	257-1/2"	130-7/8"	116"	2.0HP
PRO-14A	14000LBS	75-3/8"	81S	257"	130-7/8"	116"	2.0HP
PRO-14E	14000LBS	73-1/2"	81S	286"	130-7/8"	116"	2.0HP
PRO-14AE	14000LBS	75-3/8"	81S	285-1/2"	130-7/8"	116"	2.0HP

## II. INSTALLATION REQUIREMEN

### A. TOOLS REQUIRED

- ✓ Rotary Hammer Drill ( $\Phi 19$ )



- ✓ Hammer



- ✓ Level Bar



- ✓ English Spanner (12")



- ✓ Wrench Set  
(10#, 12#, 13#, 14#, 17#, 19#, 24#, 30#)



- ✓ Ratchet Spanner With Socket (28)



- ✓ Carpenter's Chalk



- ✓ Screw Sets



- ✓ Tape Measure (7.5m)



- ✓ Pliers



- ✓ Lock Wrench



- ✓ Socket Head Wrench  
(3#, 5#, 6#)



Fig. 3


**B. Equipment storage and installation requirements.**  
The equipment should be stored or installed in a shady, normal temperature, ventilated and dry place.

**C. SPECIFICATIONS OF CONCRETE (See Fig. 5)**

Specifications of concrete must be adhered to the specification as following.

Failure to do so may result in lift and/or vehicle falling.

1. Concrete must be thickness 4" minimum and without reinforcing steel bars, and must be dried completely before the installation.
2. Concrete must be in good condition and must be of test strength 3,000psi minimum.
3. Floors must be level and no cracks.

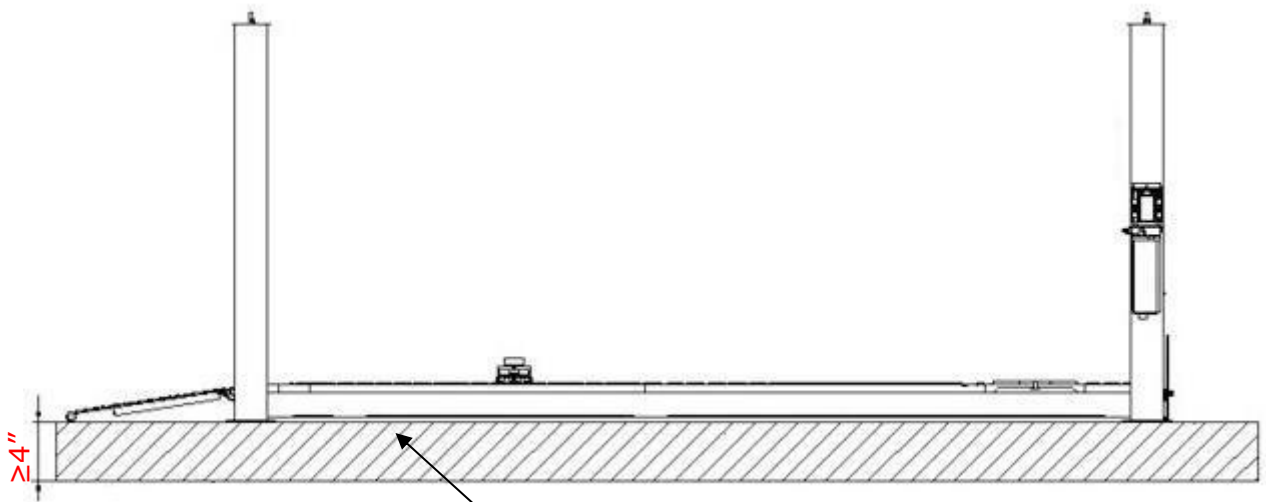

**Fig. 4**

Concrete Intensity must be 3000PSI minimum

**D. AIR SUPPLY**

Air pressure requirement: 0.8Mpa, Air line size  $\Phi 8 * \Phi 6$  and  $\Phi 6 * \Phi 4$ .

**E. POWER SUPPLY**

The electrical source must be 2.0HP minimum. The source cable size must be 2.5mm<sup>2</sup> and in good condition of contacting with floor.

### III. STEPS OF INSTALLATION

#### A. Location of Installation

Check and insure the installation location (concrete, layout, space size etc.) is suitable for lift installation.

#### B. Check the Parts Before Assembly

1, The equipment should be unload and transfer by forklift. (See Fig.6)



Fig. 5

2. Packaged lift and Hydraulic Power Unit (See Fig. 6).



Fig. 6

3. Open the outer packing carefully (See Fig. 7).

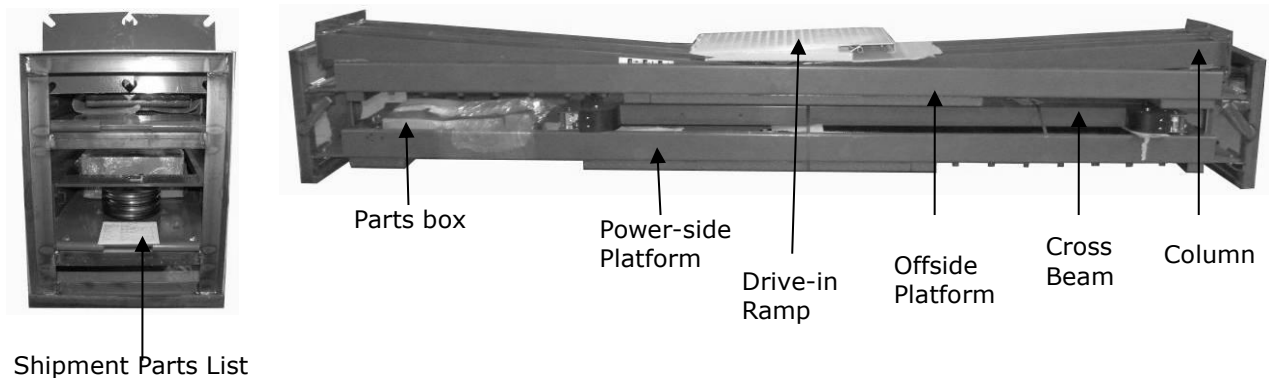


Fig.7

4. Take off the Drive-thru Ramps and Columns (See Fig. 8).




**Fig. 8**

5. Loose the screws of the upper package stand, take off the offside platform, take out the parts inside the power-side platform, than remove the package stand.


6. Move aside the parts and check the parts according to the shipment parts list (See Fig. 9, Fig. 10).

### 6.1 PRO-14, PRO-14E

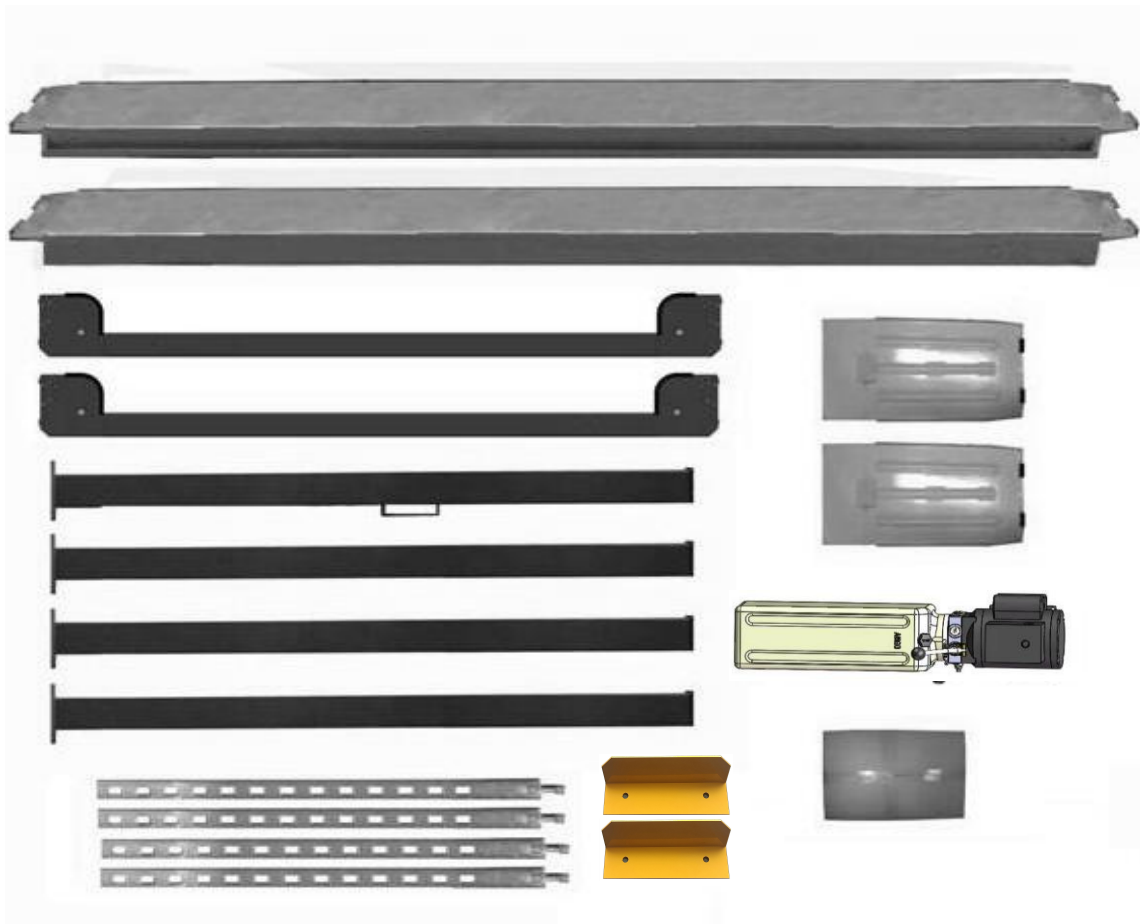

**Fig.9**

## 6.2 PRO-14A, PRO-14AE

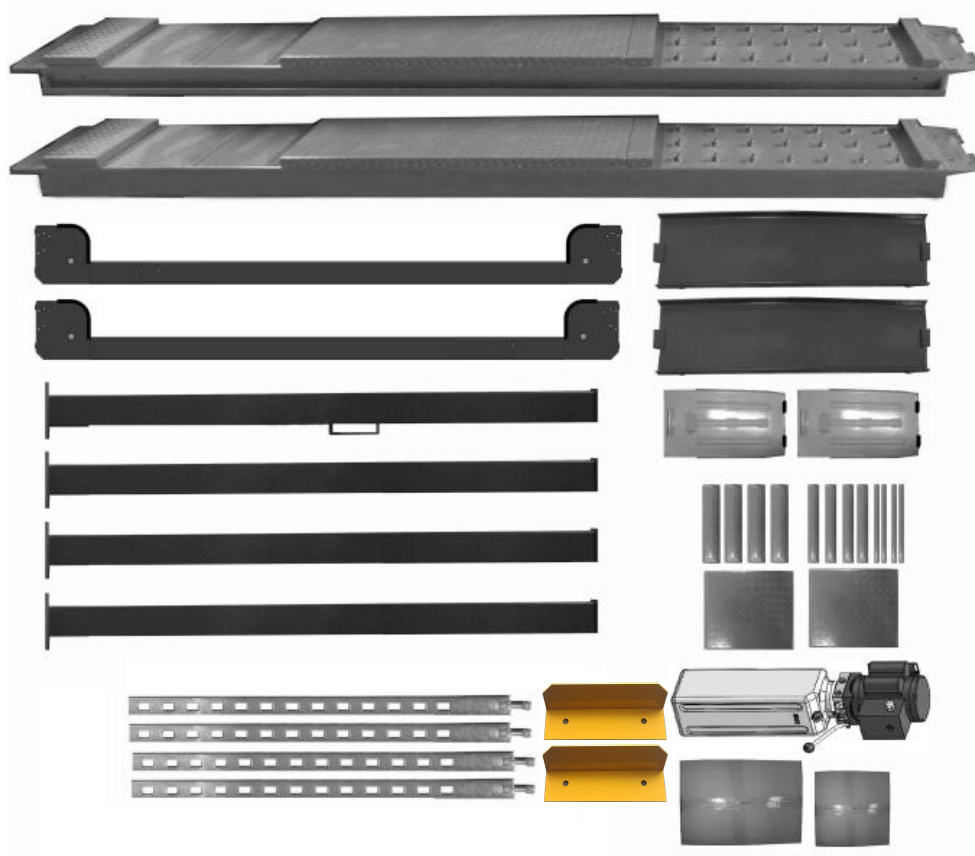

**Fig.10**

7. Open the carton of parts and check the parts according to the parts box list (See Fig. 11).



**Fig. 11**




8. Check the parts of the parts bag according to the parts bag list (See Fig. 13).




**Parts bag 1 for PRO-14,  
PRO-14E**



**Parts bag 1 for PRO-14A,  
PRO-14AE**

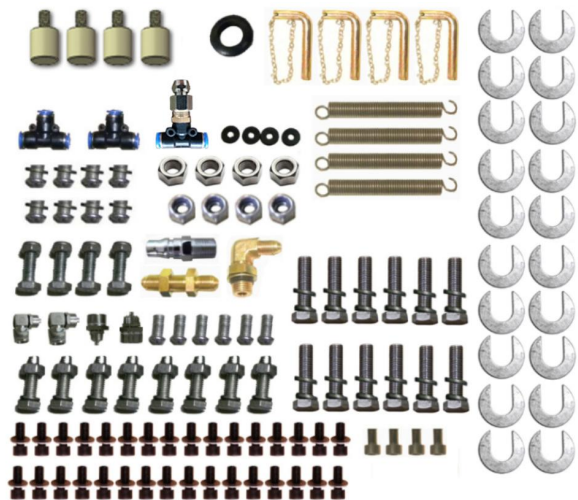


**Parts bag (2)**

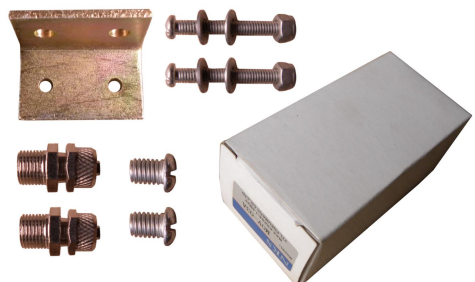

**Fig.13**

- C. Use a carpenter's chalk line to establish installation layout as per Table 1. Make sure the size is right and base is flat (see Fig. 14).



**Note: Reserve space front and behind the installation site.**

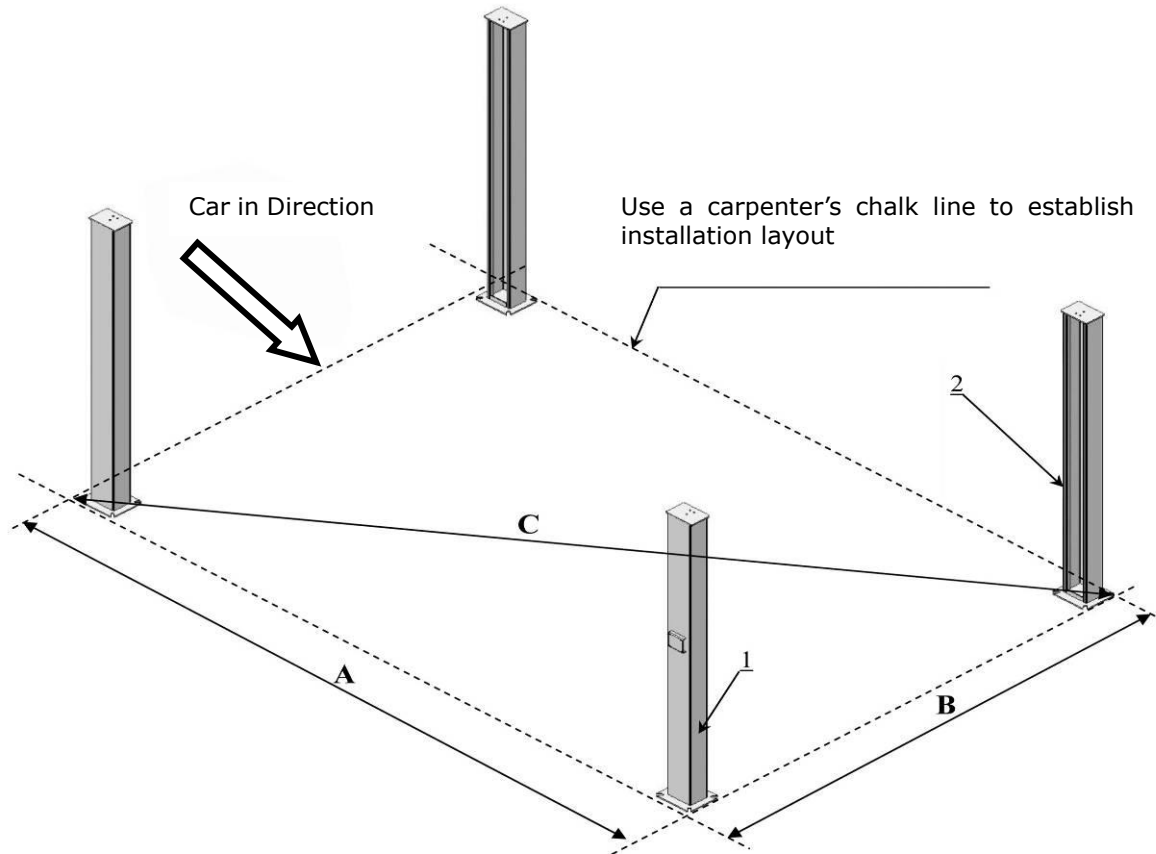

**Fig. 14**

<b>Model</b>	<b>A</b>	<b>B</b>	<b>C</b>
PRO-14,PRO-14A	216 1/2"	130-7/8"	253"
PRO-14E, PRO-14AE	245"	130-7/8"	277-7/8"


**D. Install Cross Beams (See Fig. 15, Fig. 16).**

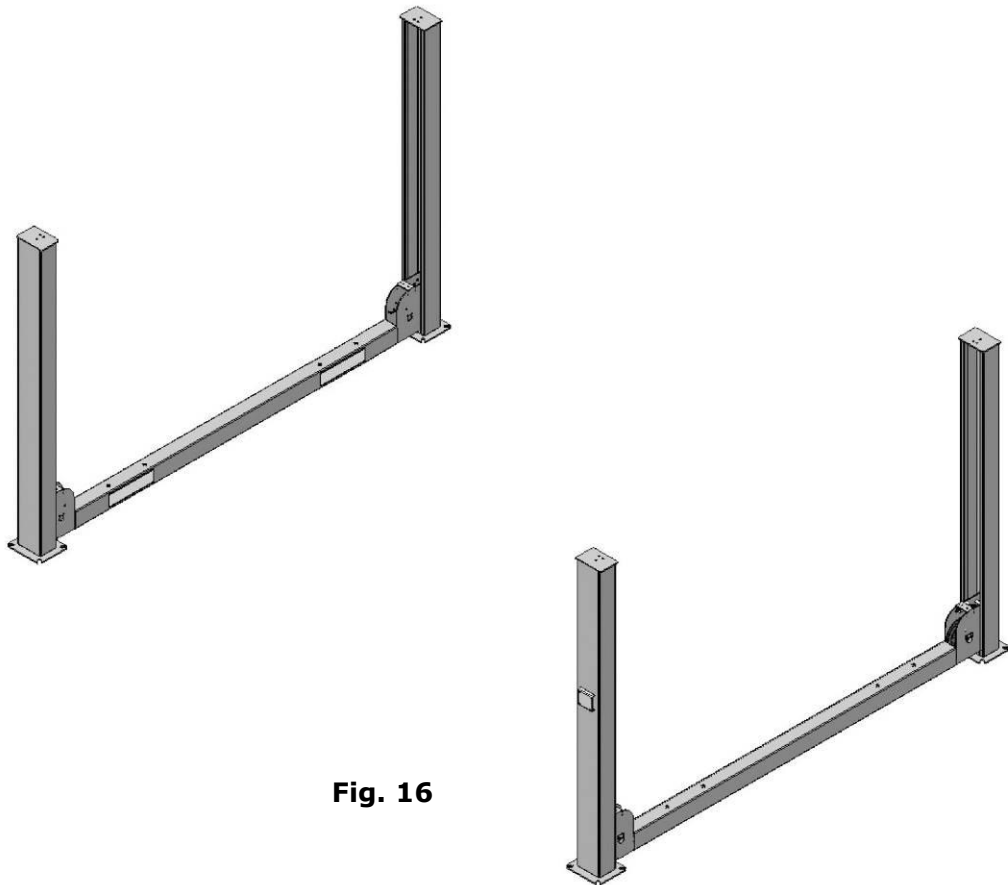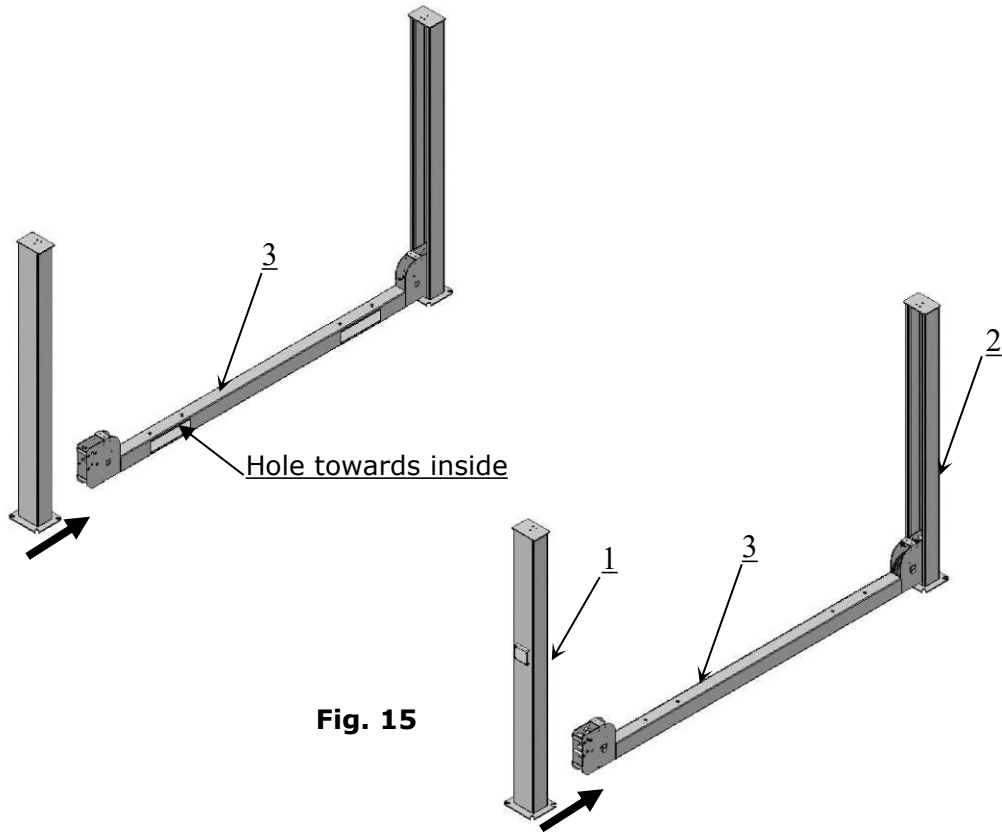

## E. Fix the Anchor Bolts

1. Prepare the Anchor Bolts (See Fig. 17).

Fig. 17

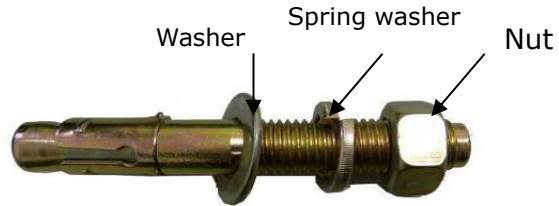

2. Using the prescribed rotary hammer drill, and drill all the anchor holes and install the anchor bolts, do not tighten the anchor bolts first (See Fig. 18).

**Note: Anchor bolts driven into the ground at least 90mm**

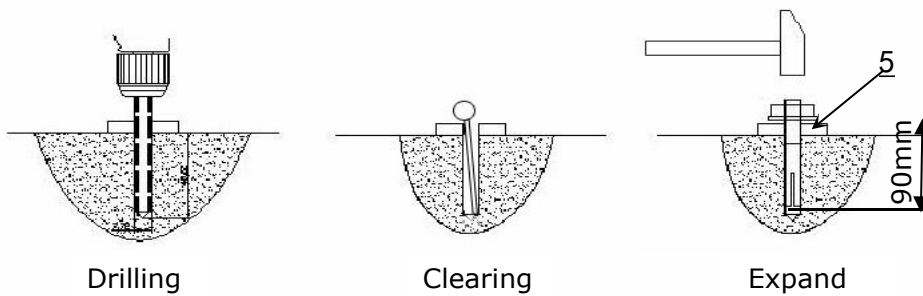


Fig. 18

## F. Install the Safety Ladders

1. Take off the pulley safety cover and unscrew the four upper nuts of the Safety Ladders, and then adjust the four lower nuts to be at the same position. Withdraw the Slack-cable safety lock of the Cross-beam to insert the Safety Ladder in, raise the Safety Ladder, and screw the upper nuts (See Fig. 19).


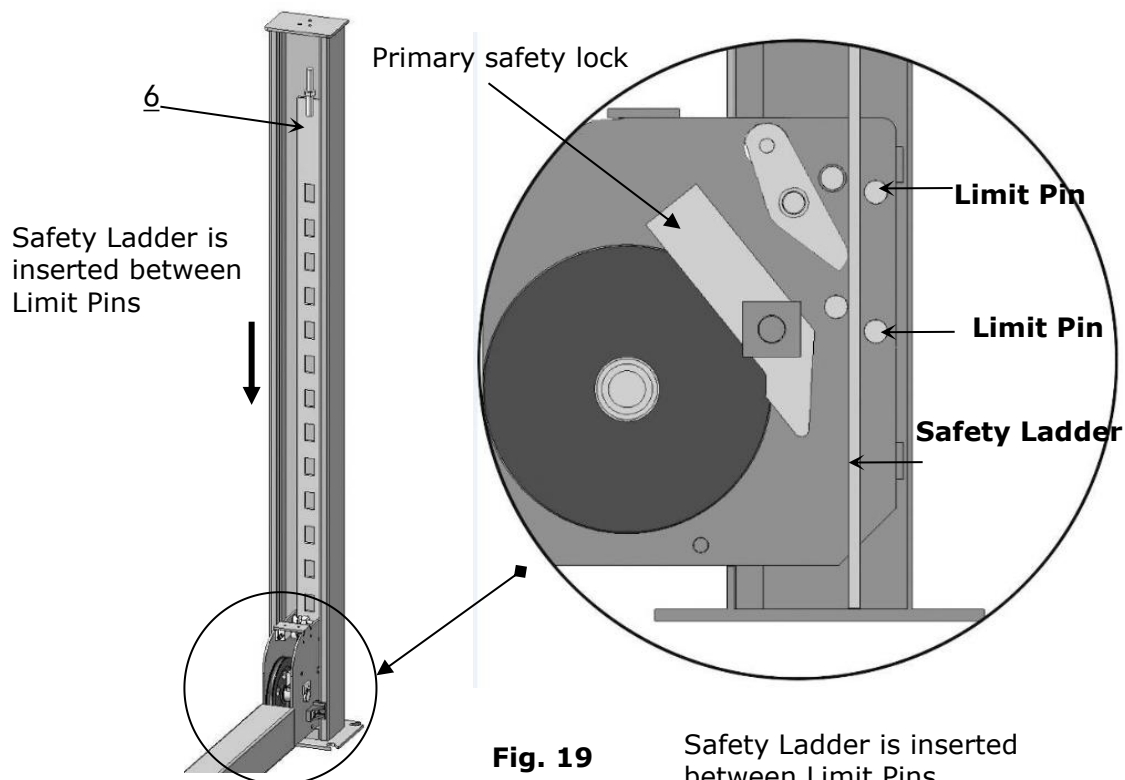


Fig. 19

Safety Ladder is inserted between Limit Pins


2. Install Safety Ladders (See Fig. 20).

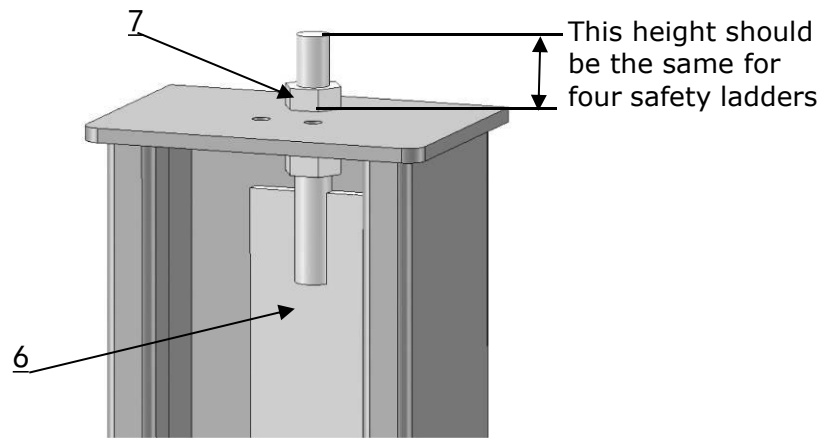

Safety ladder pass through the hole of the top plate, then tighten the two nuts.

**Fig. 20**

G. Put the Cross Beams at the same height (See Fig. 21).

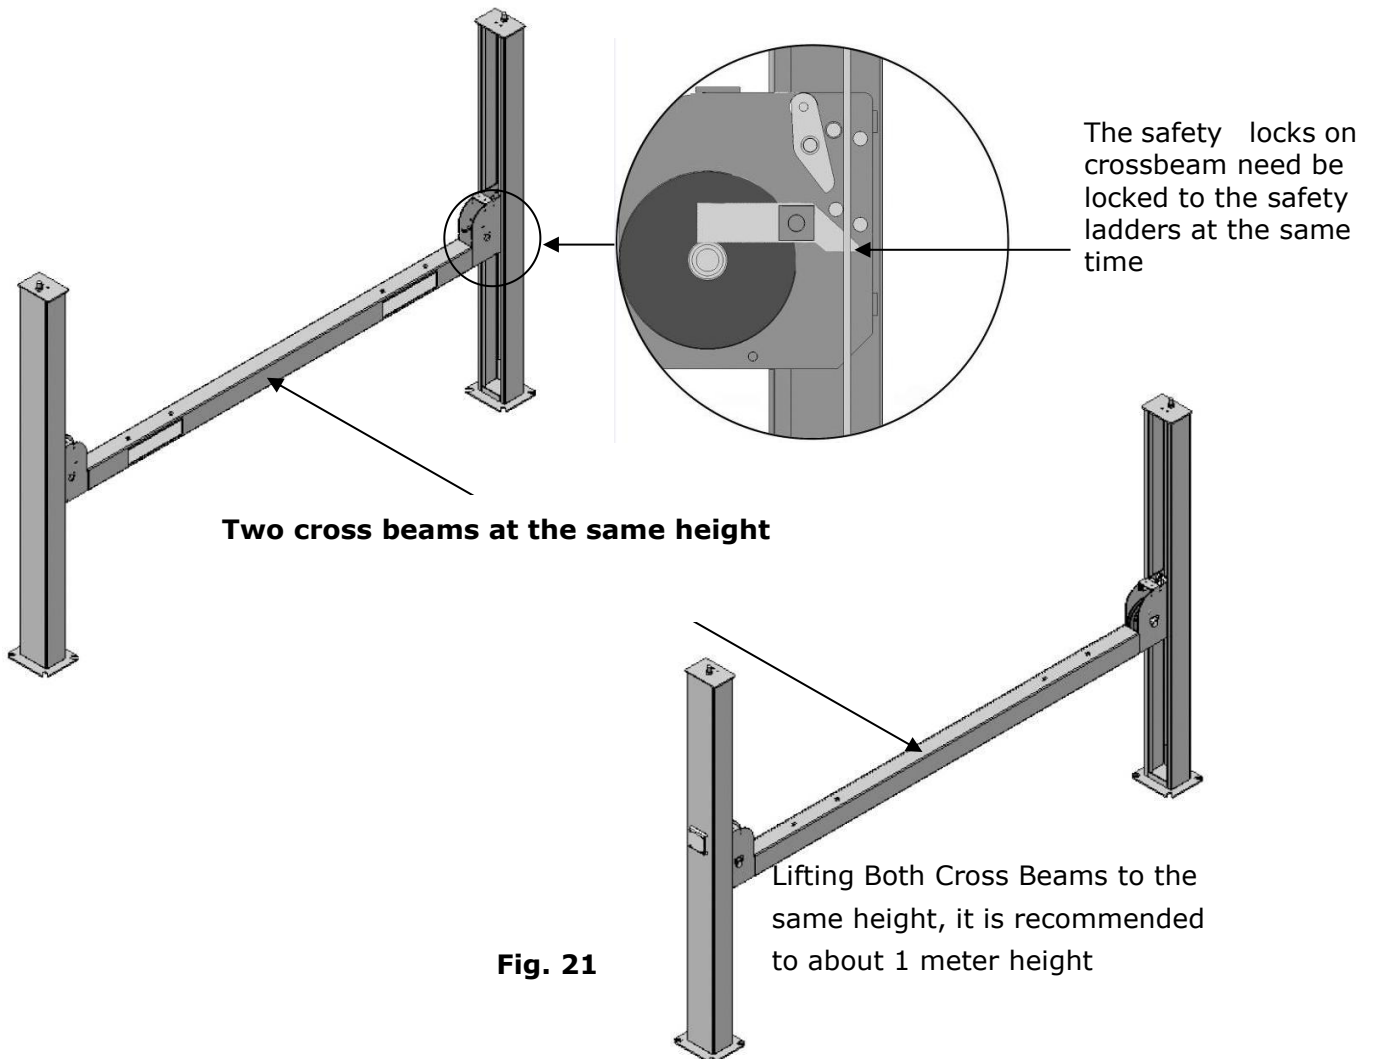

**Fig. 21**

## H. Install power side platform.

1. Put the power side platform upon the cross beams by fork lift or manual, offset the cross beams to the outside till the pulleys of both platforms can set up into the cross beam (See Fig.22), Install the power side platform and screw up the bolts. (See Fig.23)


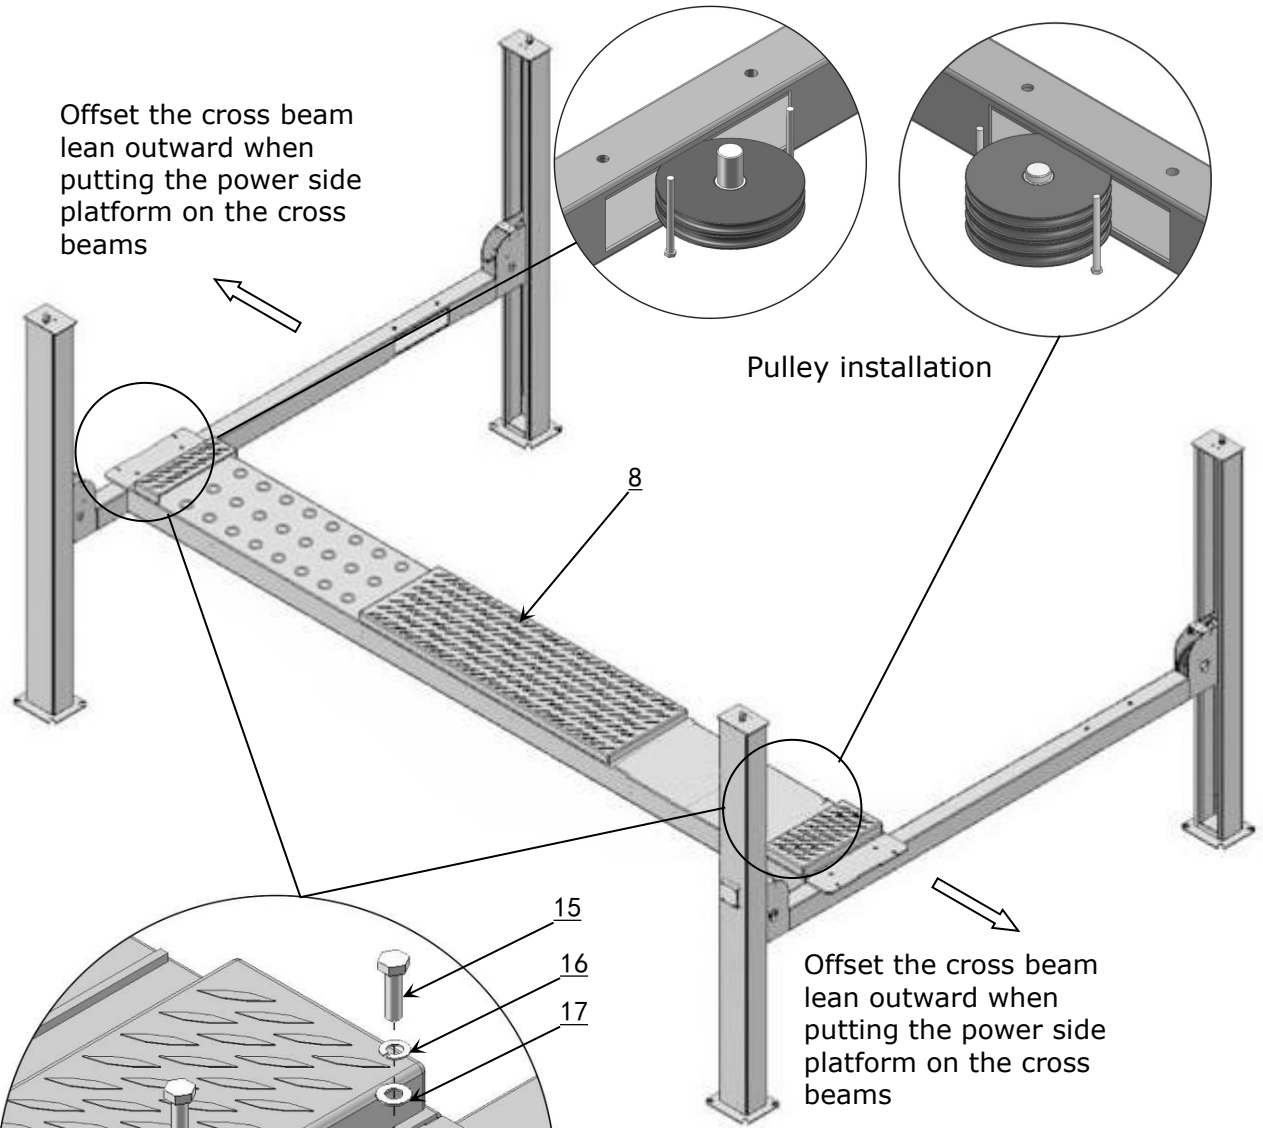


Fig. 22

**Install the power side platform and screw up the hex nuts M16\*40**

Fig. 23

**I. Assembly offside platform and slider block.** check the vertical of columns with level bar, adjusting with the shims if the columns are not vertical, and then tighten the anchor bolts (See Fig. 24).

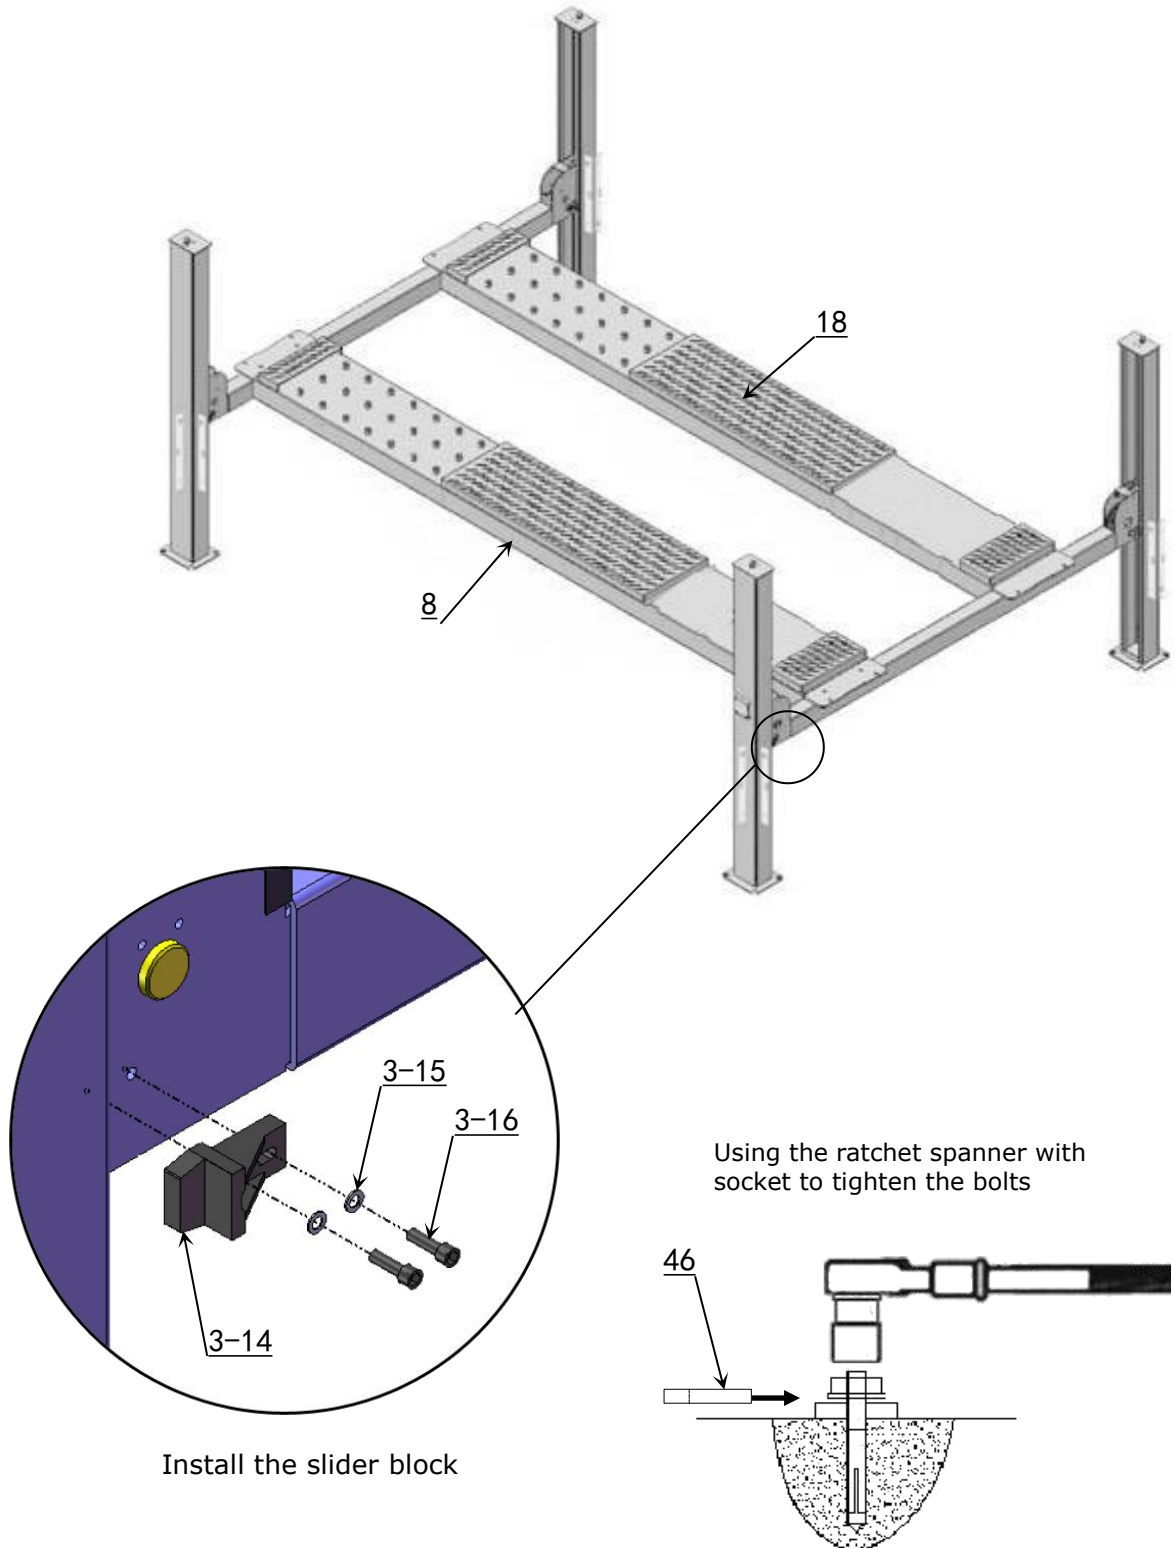

Install the slider block


Using the ratchet spanner with socket to tighten the bolts

**Note: The tightening torque for the anchor bolt is 150N.m**

**Fig. 24**

**J. Install cables (See Fig. 25).**

1. Pass through the cables from the platform to the columns according to the number of the cables.

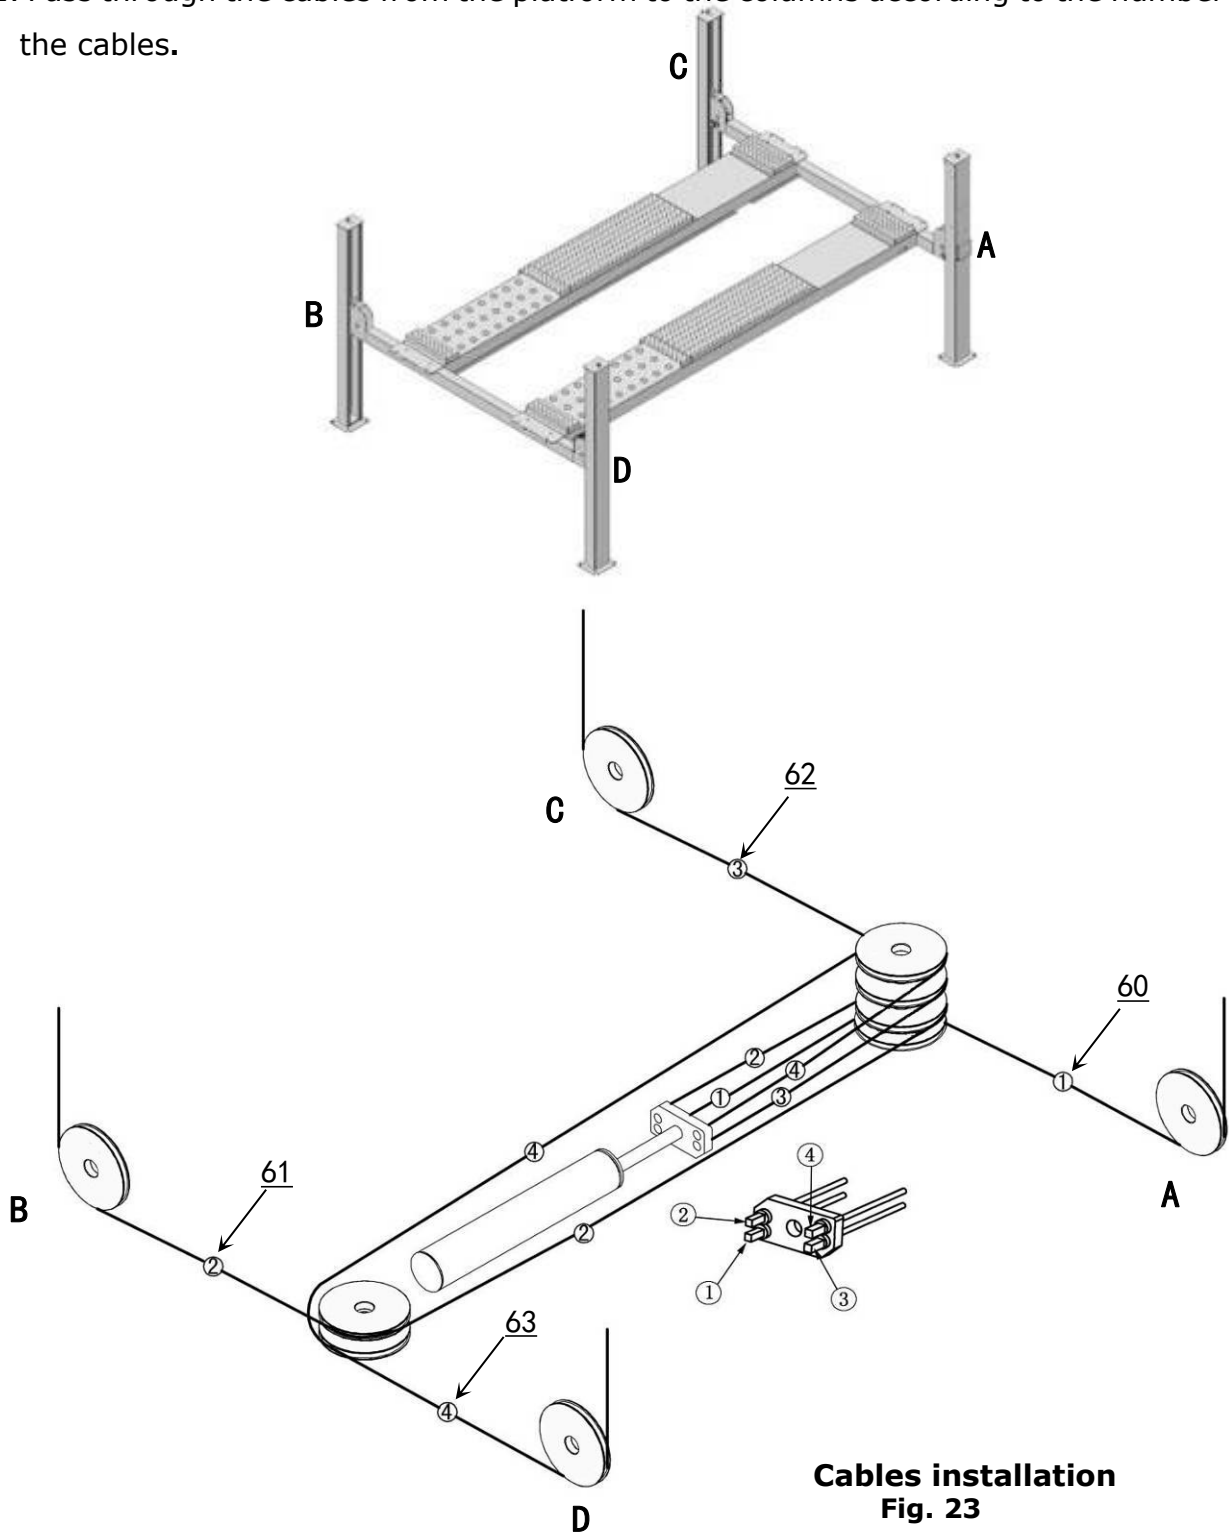


**Cables installation  
Fig. 23**

No. Cable	①	②	③	④
Length PRO-14(A) (inc. connecting fitting)	162-3/4"	438-1/2"	230-1/2"	371"
Length PRO-14E(AE) (inc. connecting fitting)	191-3/8"	495-5/8"	259"	428-1/8"




2. The cable pass through the cross beam to top plate of columns and be screwed with cable nuts (See Fig. 26).

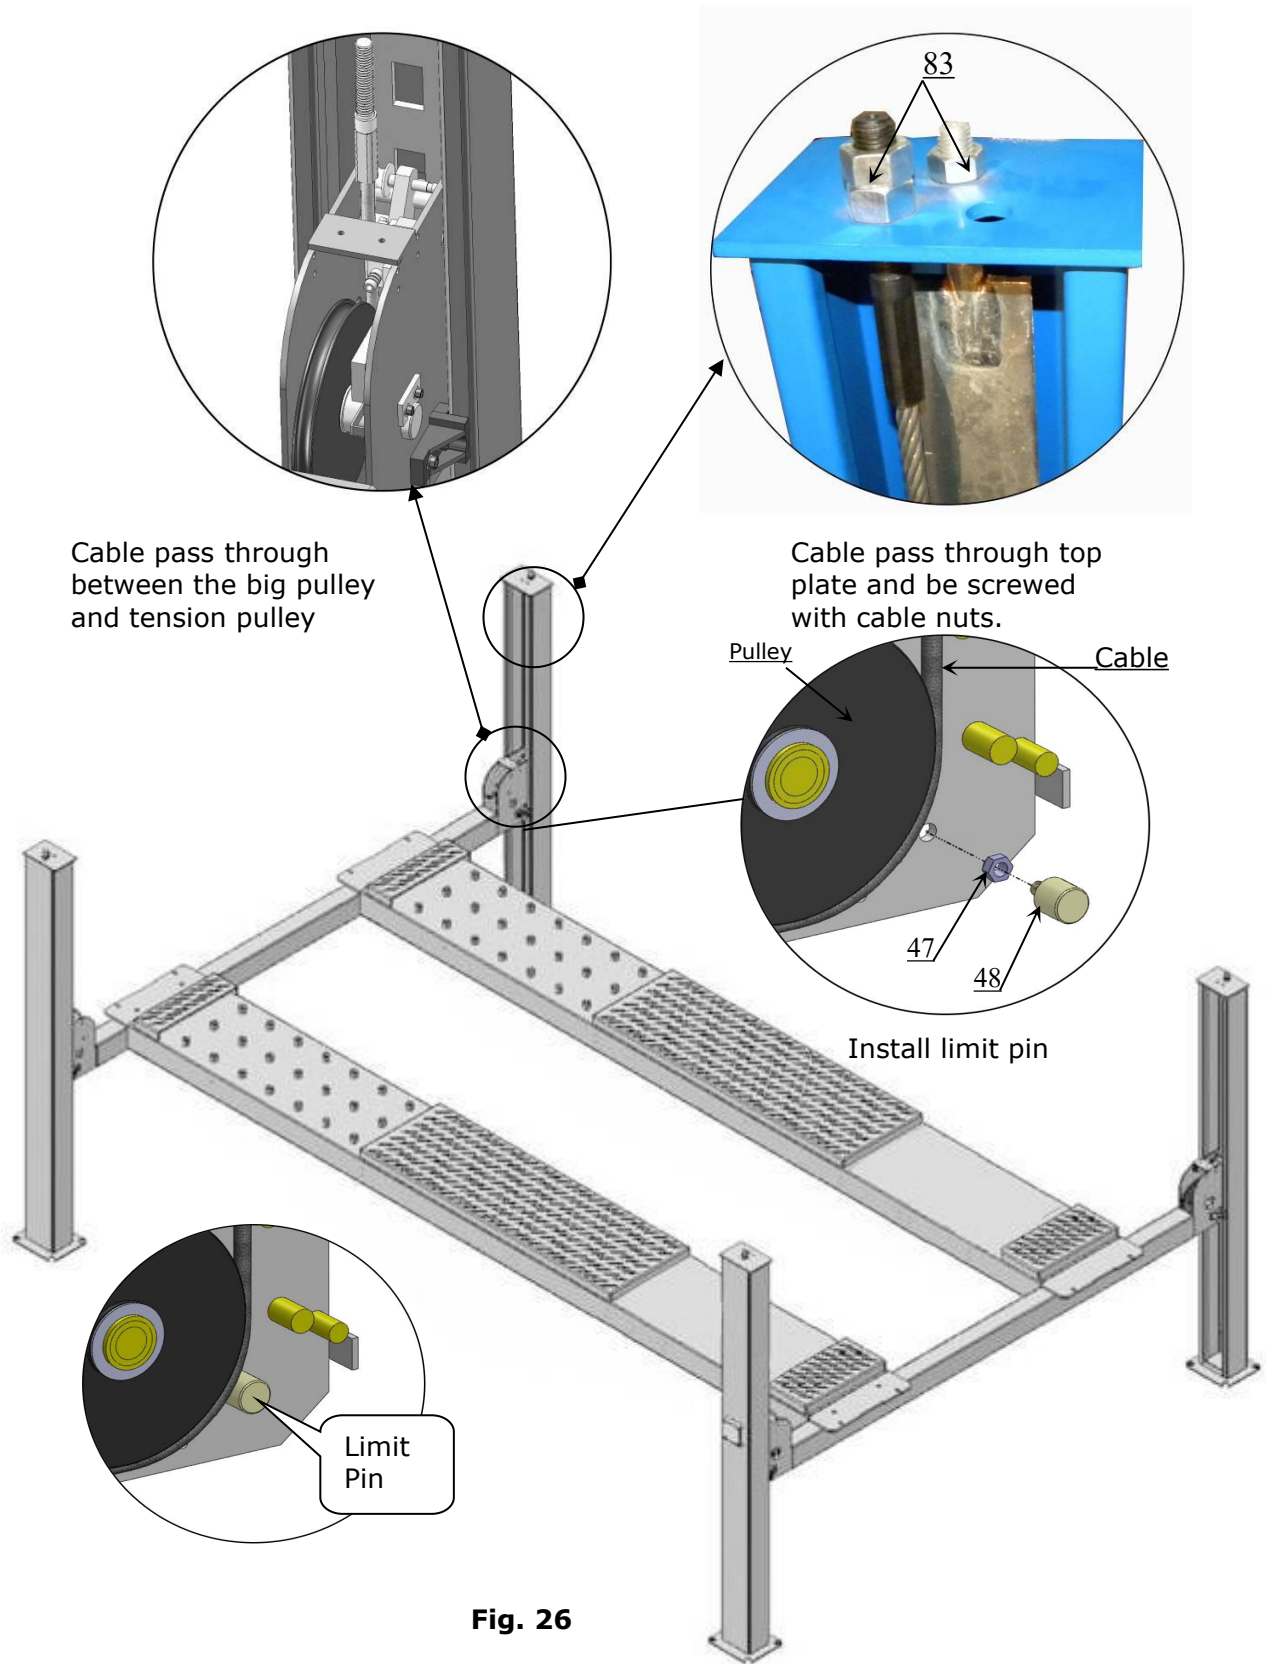

**Fig. 26**


3. Illustration for platform cables (See Fig. 27).

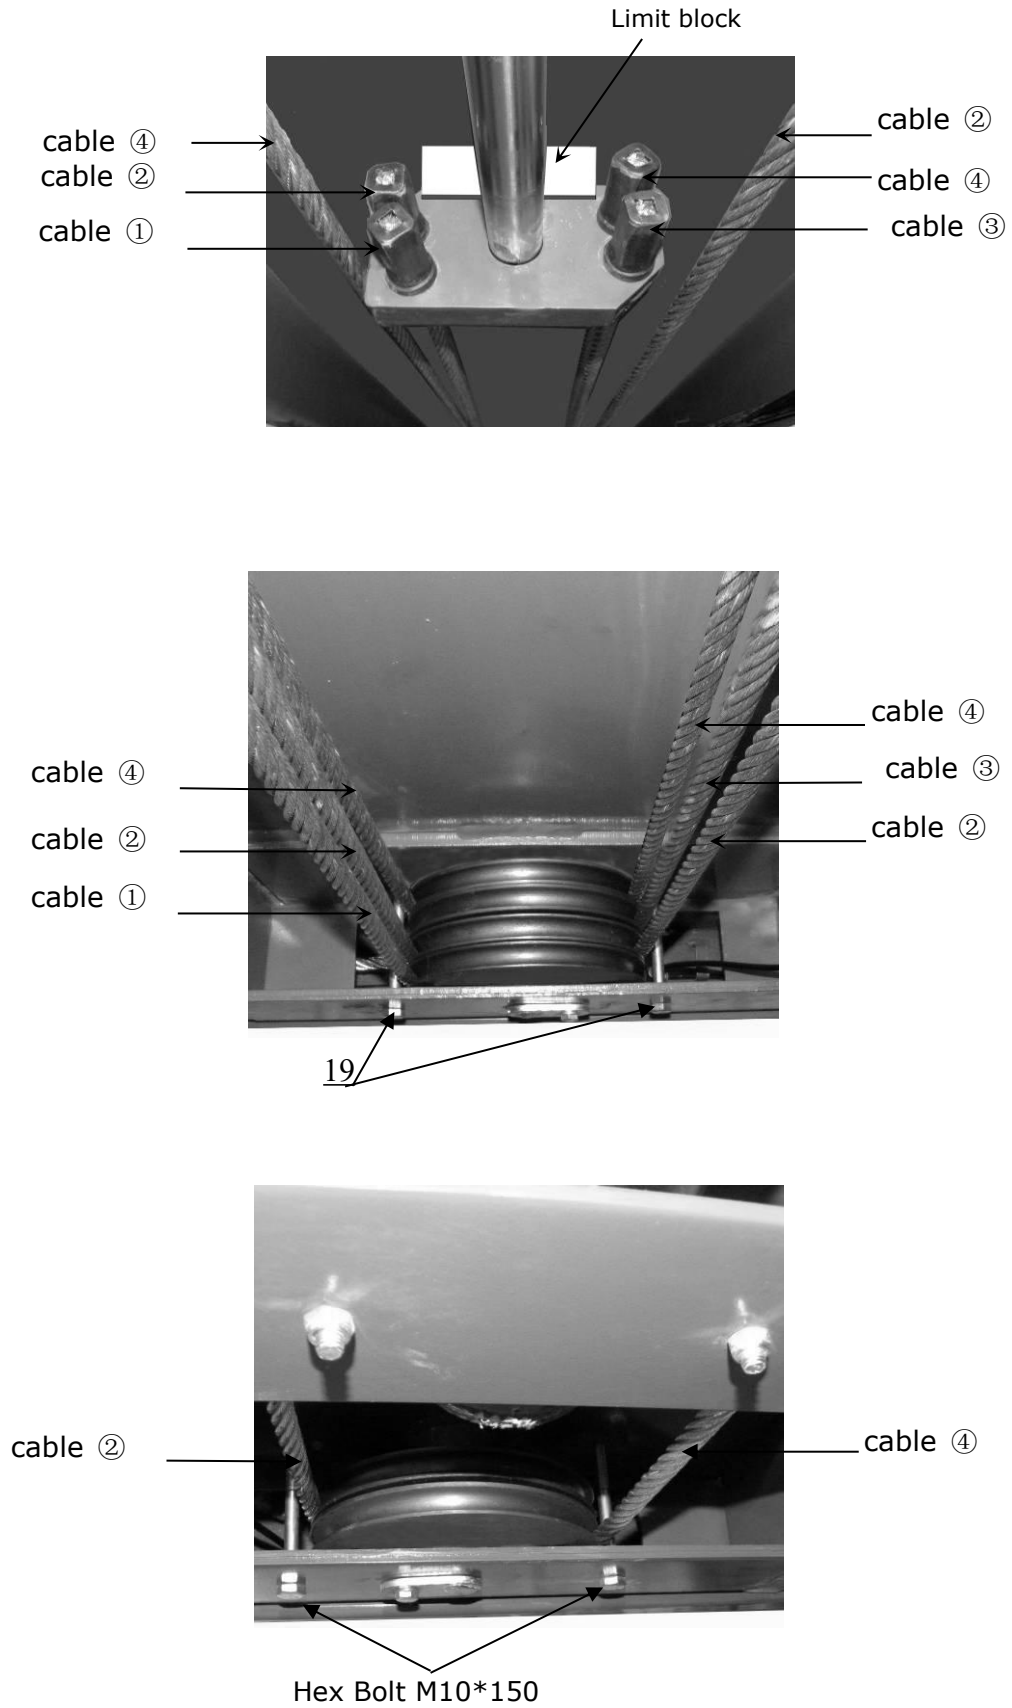

**Fig. 27**

## K. Install Oil-water separator, Manual control air valve and Power unit


(See Fig. 28).

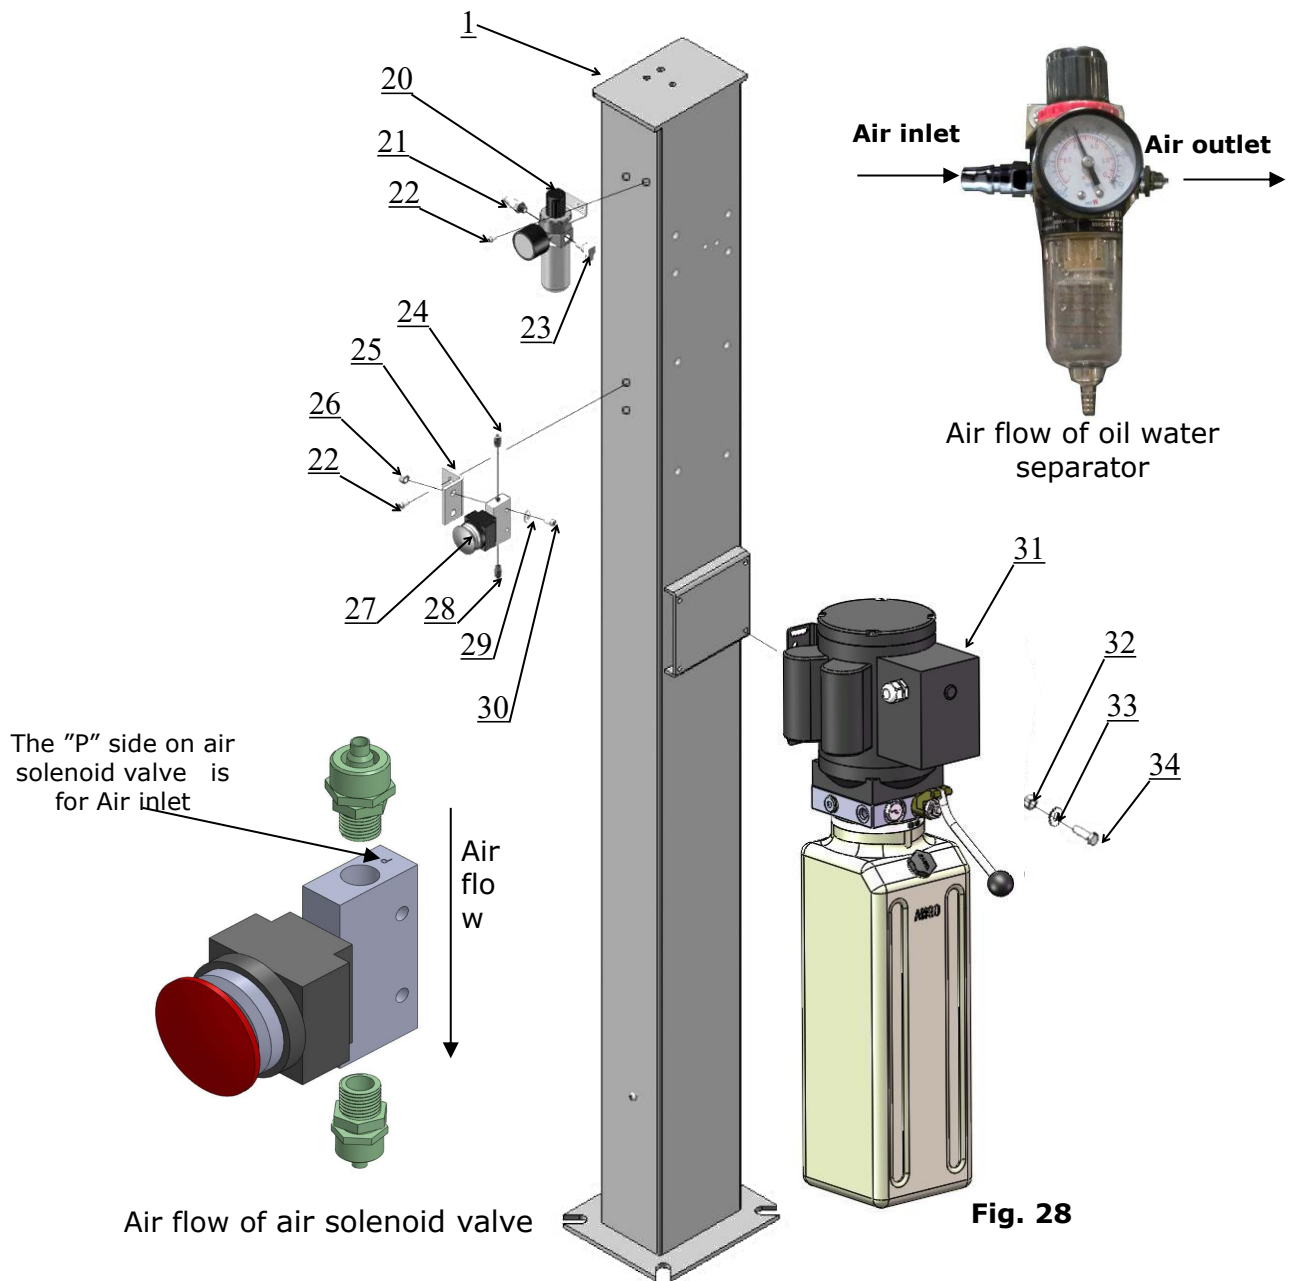

Item	Part#	Description	QTY
20	10420145	Oil-water separator AFR-2000	1
21	10420146	Straight Fitting for air line	1
22	10209009	Cap Head Bolt M6*8	8
23	10420076	Fitting 6*8 screw thread	1
24	10420159	Straight Fitting 6*8 screw thread	1
25	11420160	Fixing plate of Manual Control Valve	1
26	10420161	Self locking nut M4	2
27	10420162	Manual Control Air Valve	1
28	10420163	Straight Fitting for Air Line 6*4 screw thread	1
29	10420148	Washer $\phi 4$	4
30	10420164	Cap Head Bolt M4*30	2
31	071102	Manual power unit	1
32	10209005	Self locking nut M8	14
33	10209004	Rubber Ring $\phi 8*20*3$	4
34	10209003	Hex Bolt M8*25	4

**L. Install Hydraulic System (See Fig. 29).**



Note: Oil hoses connected to oil cylinder must be passed above the cable, cylinder inlet port must swing upward to avoid the oil hose and oil return pipe scratched by cable.

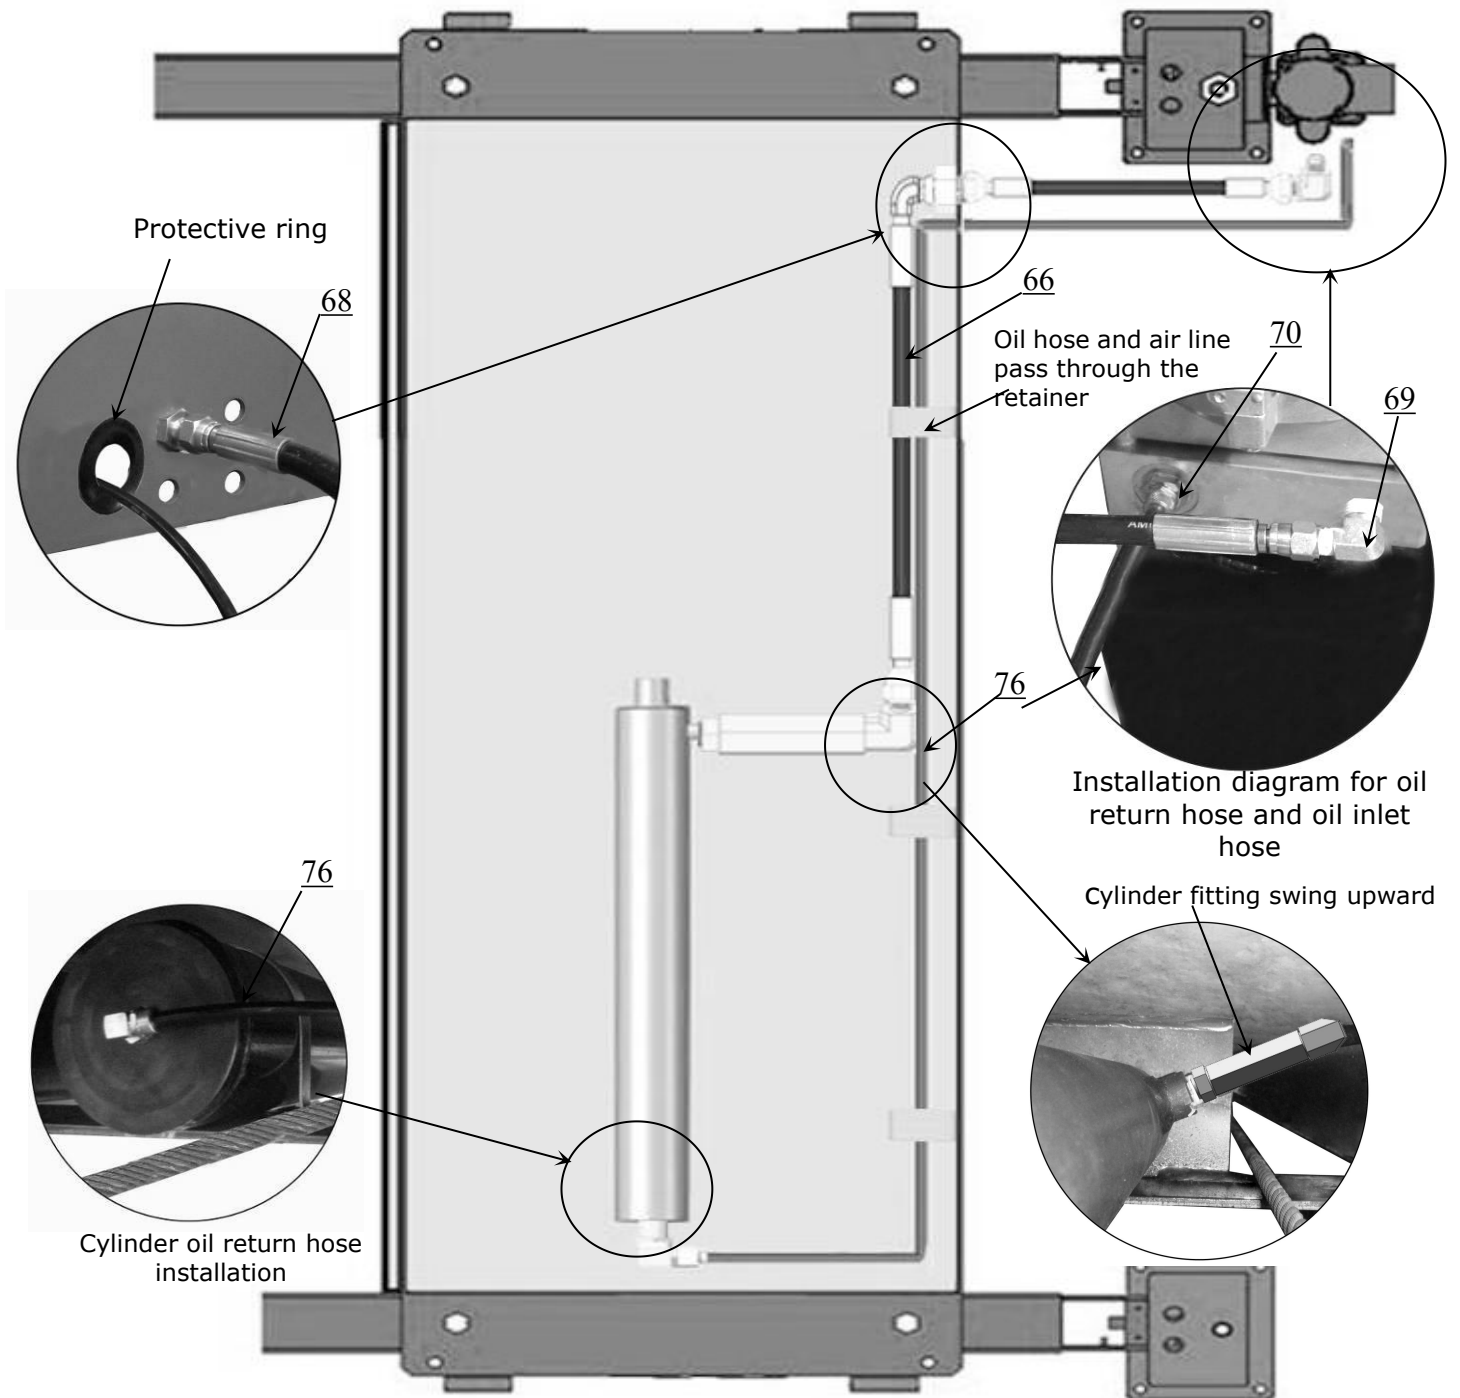


**Fig.29**

### M. Install air-line system

1. Connecting front and rear Cross Beam cylinders by using 6\*4 black air line. (the actual length of air line can be cut by user) **(See Fig.30)**
2. Cut the 6\*4 black air line by scissor between two retainer, then connect the air line with T fitting. **(See Fig. 31).**
3. Connecting the solenoid valve using 6\*4 black air line (the actual length of air line can be cut by user) **(See Fig. 32).**

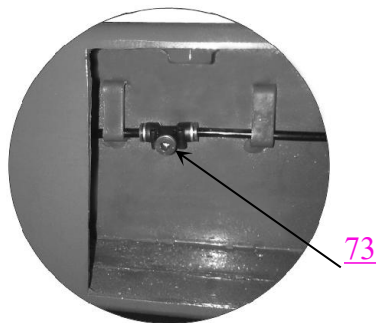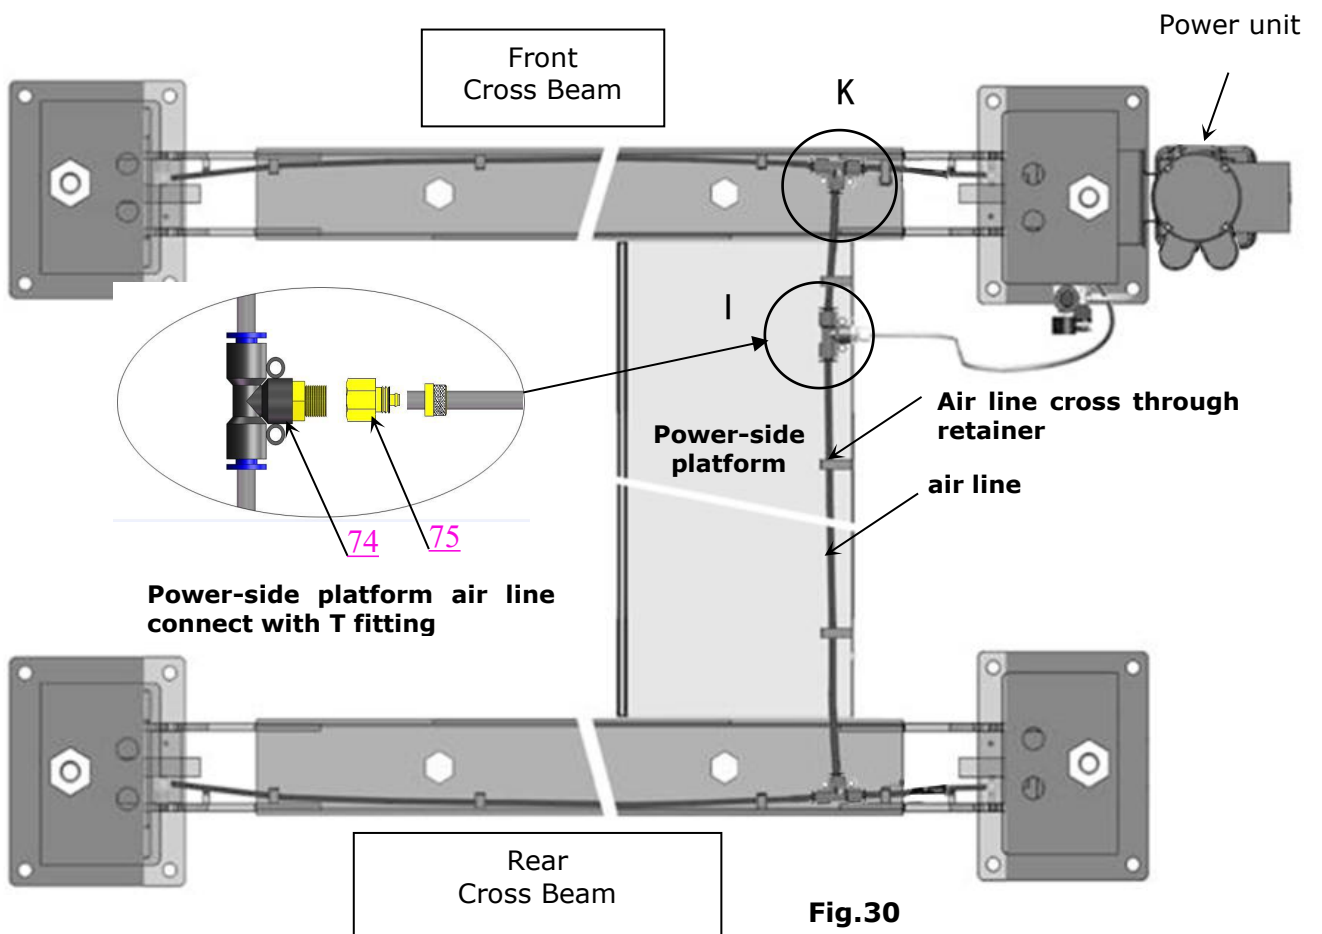


K enlarged view  
Fig.31

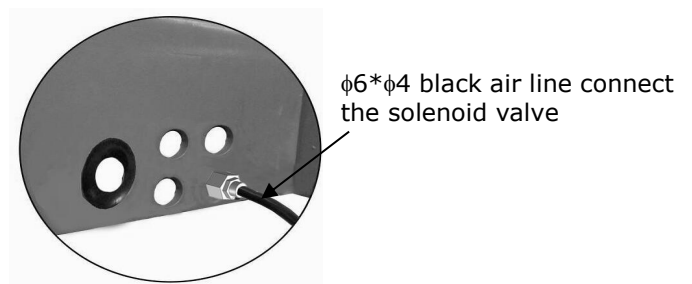


L enlarged view  
Fig.32

5. Install oil-water separator and manual control air valve. (see **Fig.33**)

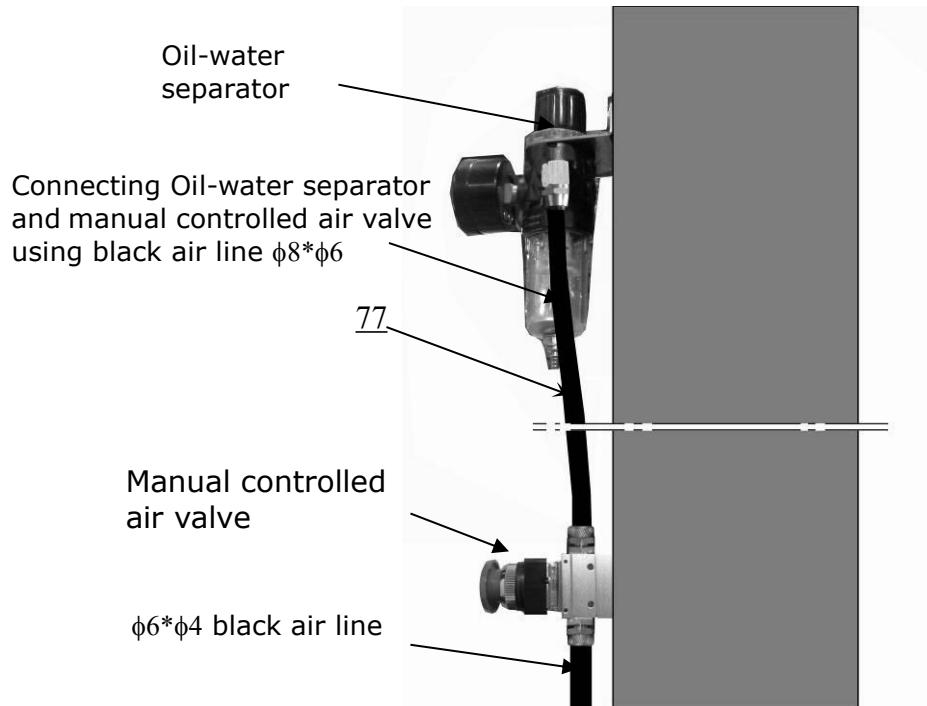

**Fig. 33**

6. Connecting air inlet (Air supply pressure 8kg/cm<sup>2</sup>), adjusting the air pressure of Oil-water separator to 0.8MPa (**See Fig. 34**).

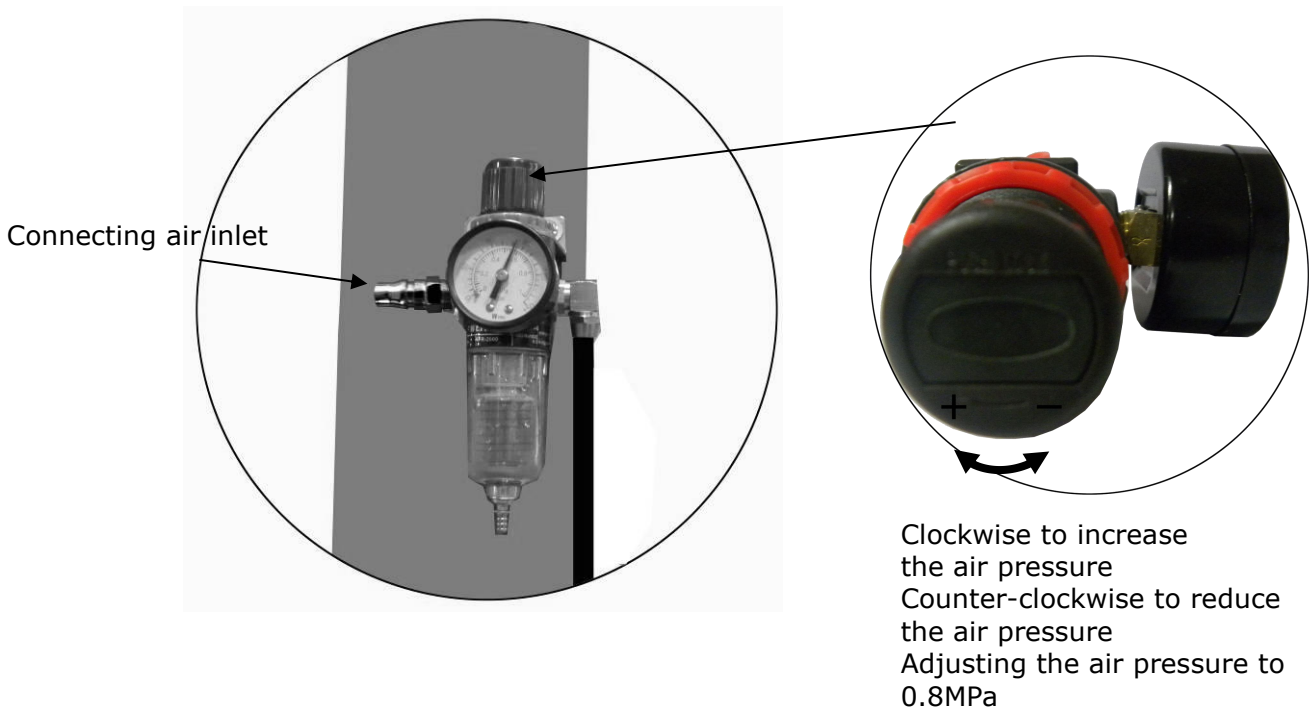

**Fig. 34**

## N. Install Electrical System


Connect the power source on the data plate of Motor.

**Note: For the safety of operators, the power wiring must contact the floor well.**


### Single phase motor (See Fig. 35)

Connecting the two power supply wires to terminals of AC contactor marked L1, L3 respectively.

Earth wire (yellow and green wire) is connected with the earth wire terminal of the motor

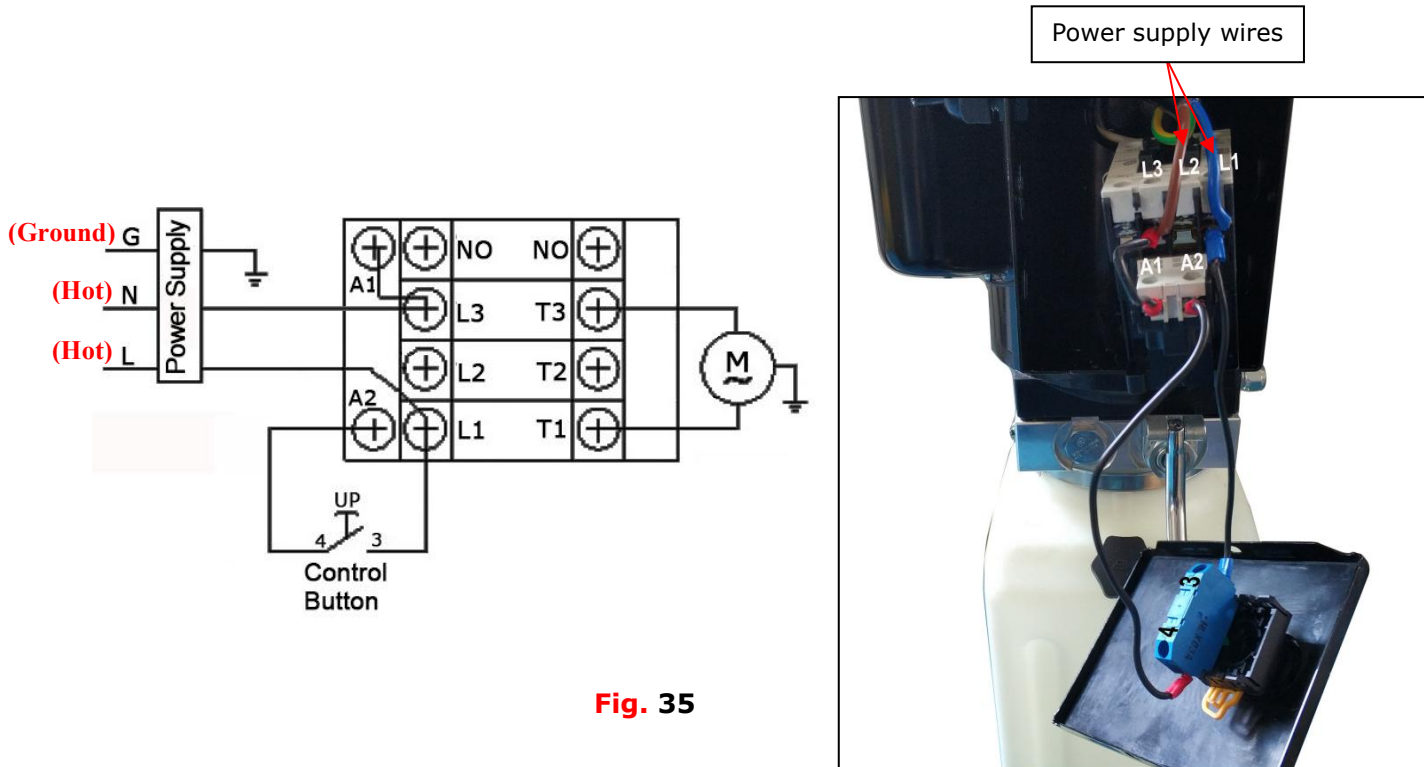


## O. Install Spring and Safety Cover of Cross Beam (See Fig. 36).


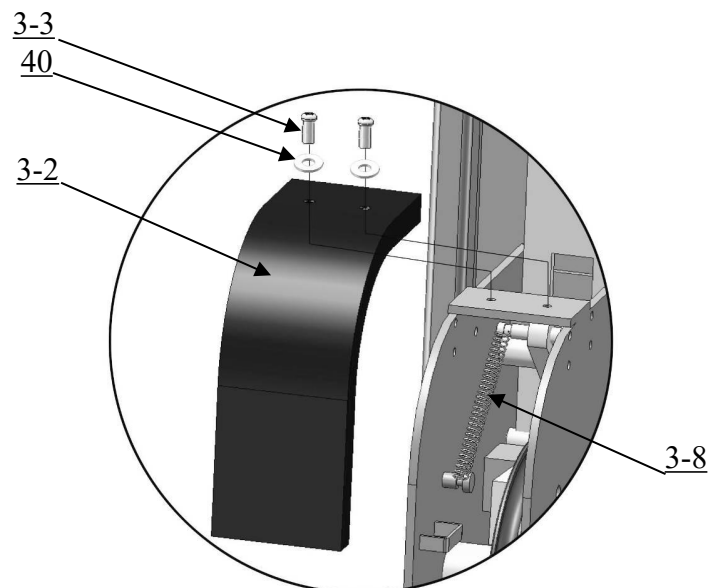


**P. Install Drive-in ramp, Tire stop plate, Platform locking plates, Steel ball set, Limit rod (See Fig. 37).**


Install Drive-in ramp

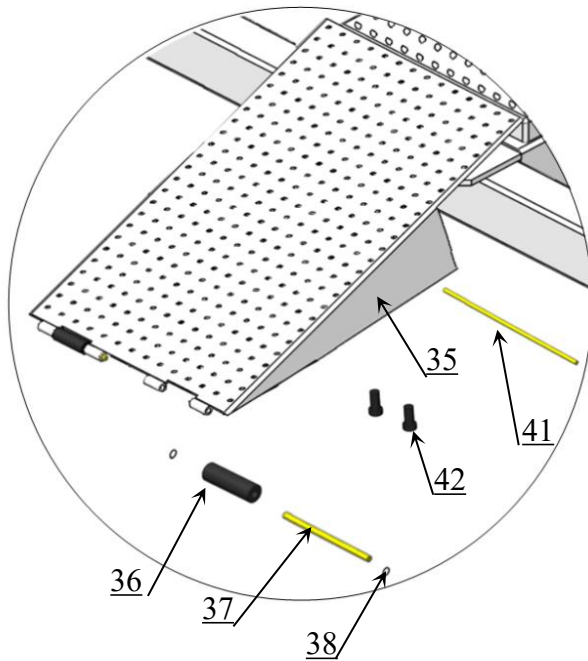


Install Tire stop plate

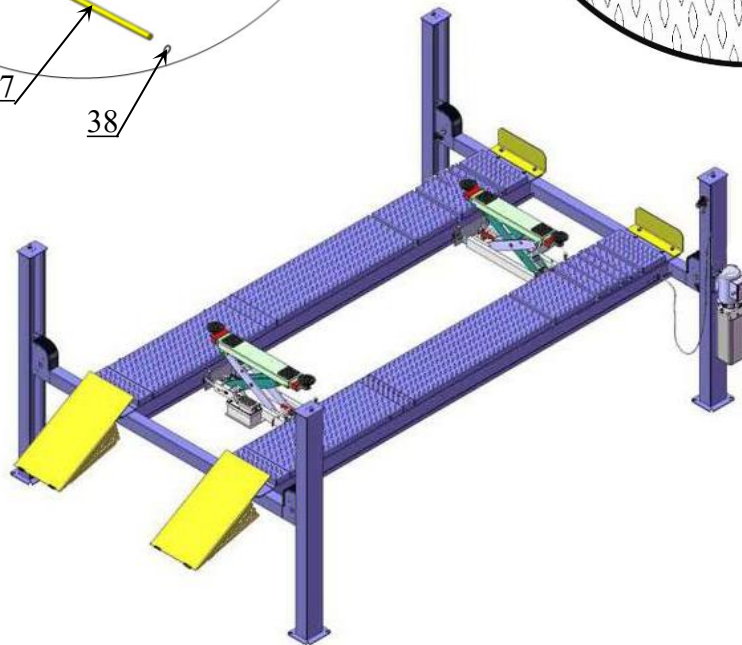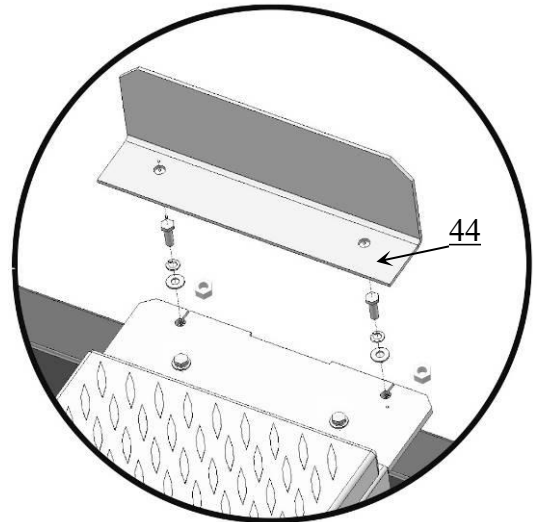

The lock plates are used to prevent the turning & slipping of offside platform, Using Hex bolt M8×20 for the connection.

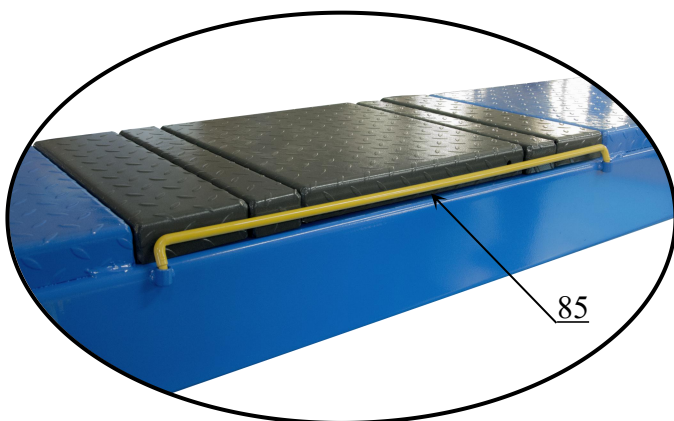

Install Limit rod

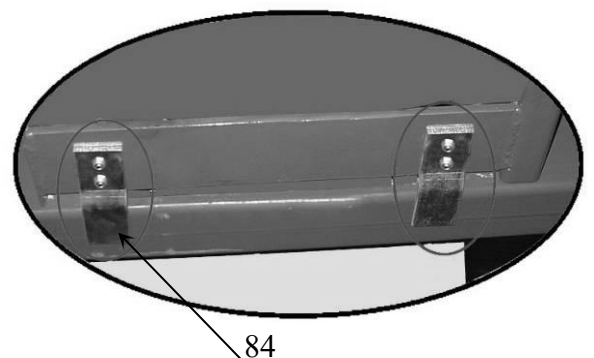

**Fig.37**



# IV. EXPLODED VIEW

Model PRO-14, PRO-14E





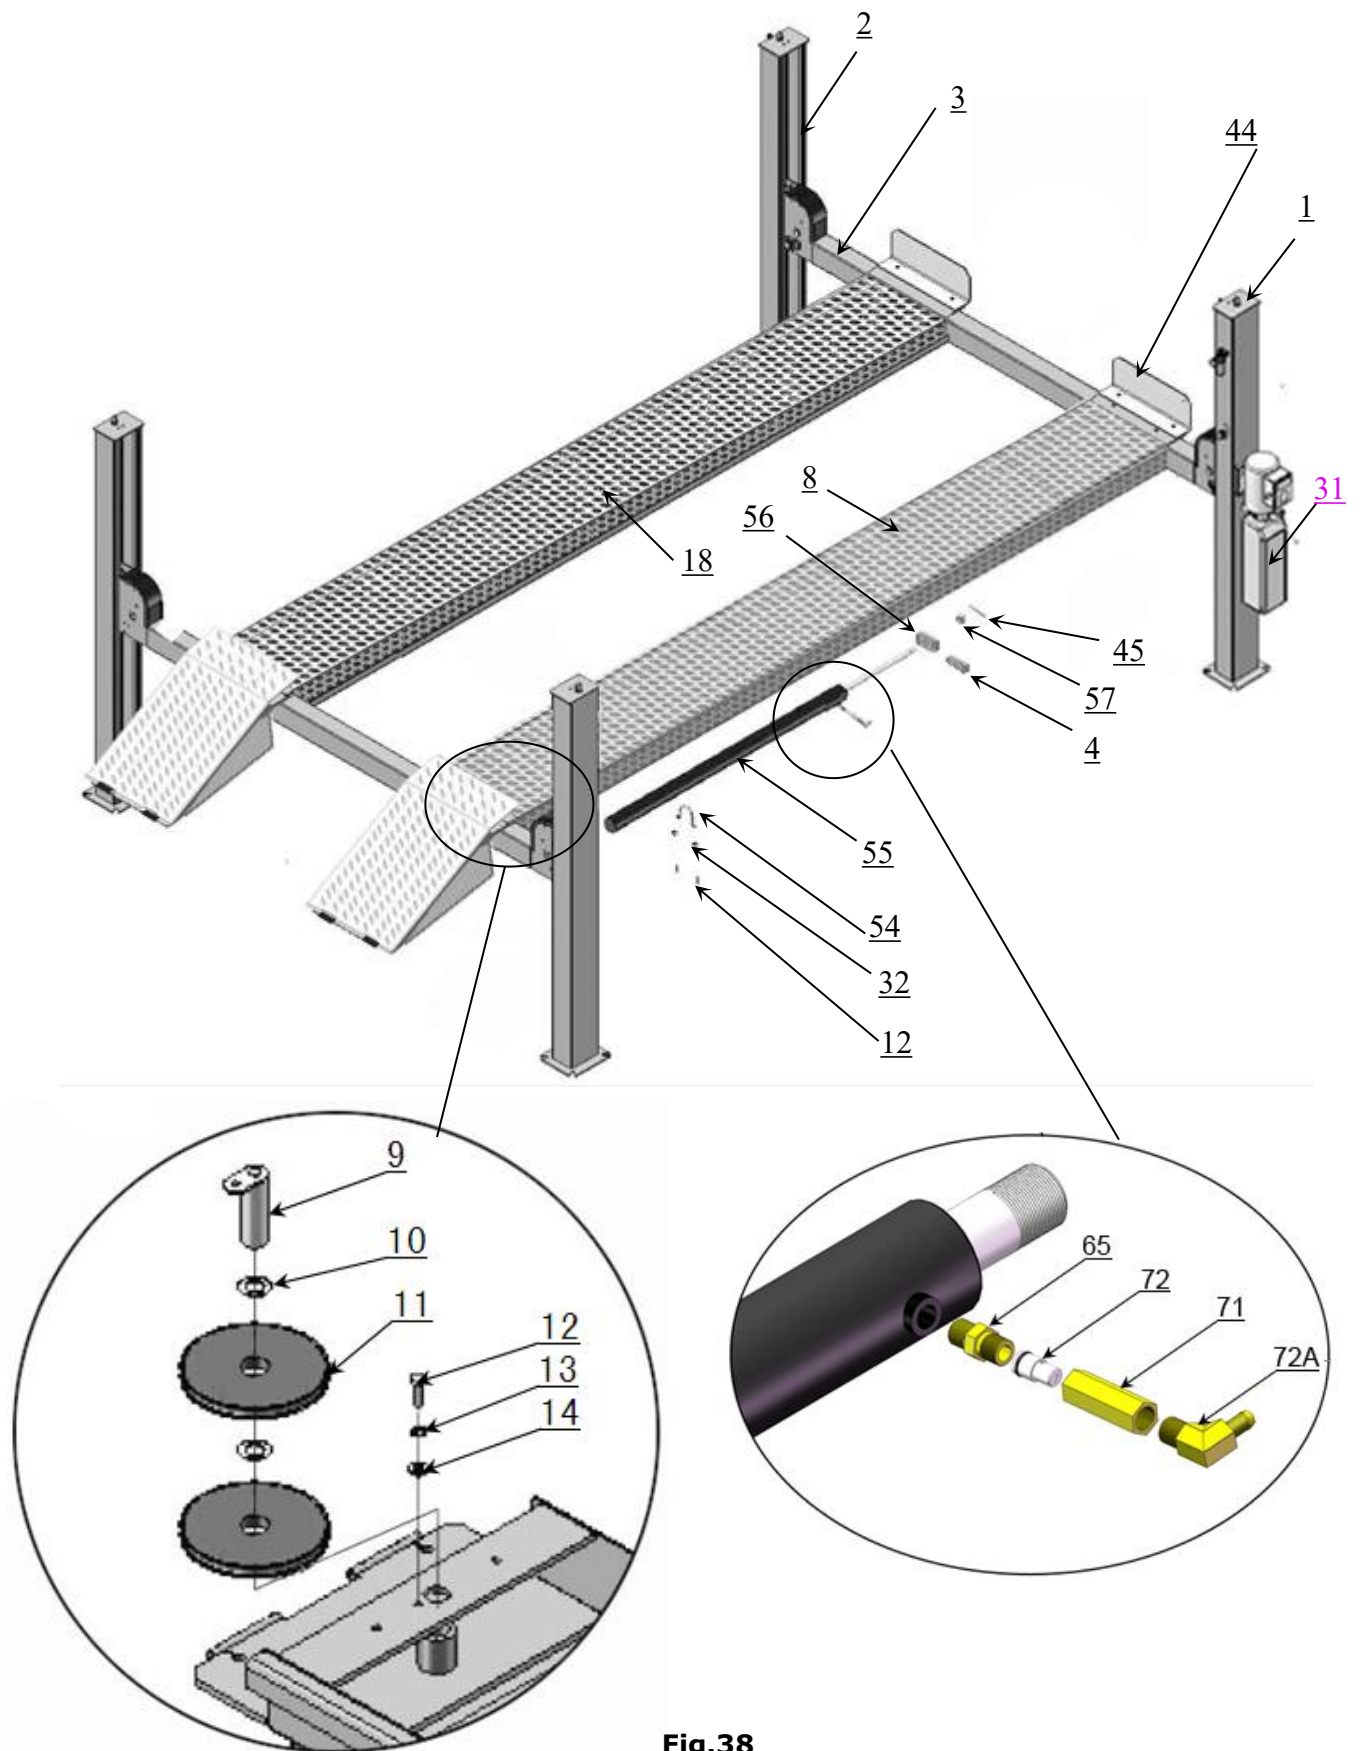


Fig.38

**Model PRO-14A, PRO-14AE**

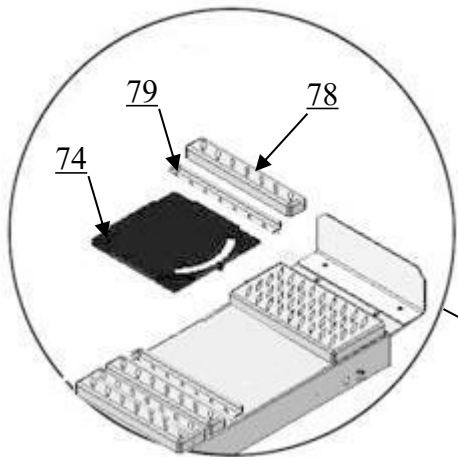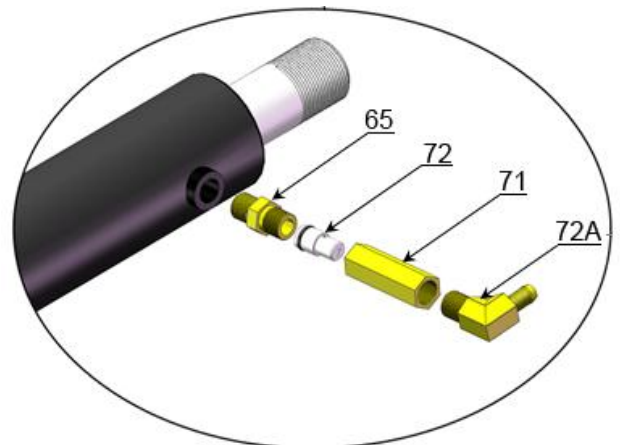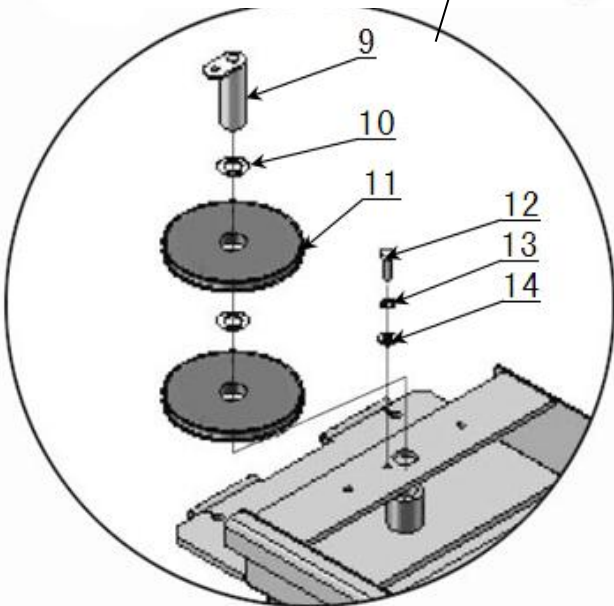

When installing the turntable, both sides are required a 35mm-high turntable block.

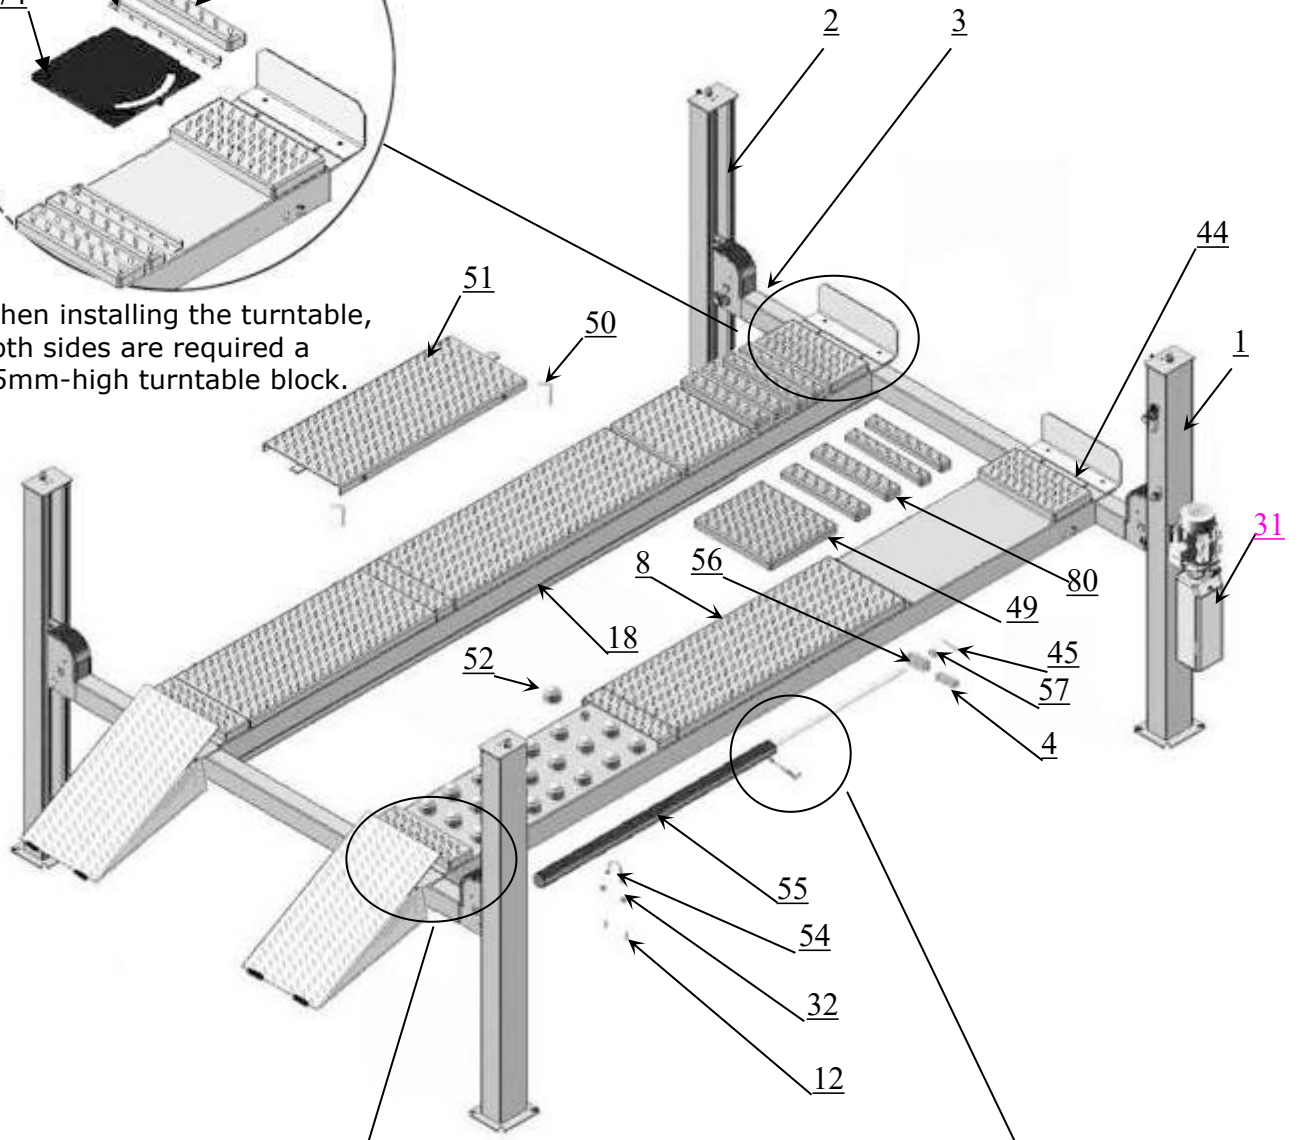

**Fig.39**

**Parts list for PRO-14, PRO-14A, PRO-14E, PRO-14AE**

Item	Part#	Description	PRO-14	PRO-14A	PRO-14E	PRO-14AE
1	11460021	Power-side Column	1	1	1	1
2	11460020	Offside Column	3	3	3	3
3	10460063	Cross Beam assy.	2	2	2	2
4	10476016	Limit slider	1	1	1	1
5	10209059	Anchor Bolt 3/4*5-1/2	16	16	16	16
6	11460074	Safety Ladder	4	4	4	4
7	10476014	Hex Nut M22	8	8	8	8
8	11460054	Power-side Platform	1	0	0	0
	11460024		0	1	0	0
	11460024		0	0	1	0
	11460055		0	0	0	1
9	11476010	Pulley Shaft Weldment	2	2	2	2
10	10476029	Washer for pulley φ100*φ51*5(HK016)	4	4	4	4
11	11476636	Pulley	6	6	6	6
11A	10476025	Bronze Bush for Pulley φ60*φ50*20	10	10	10	10
12	10209043	Hex Bolt M8*20	12	12	12	12
13	10209034	Lock Washer φ8	2	2	2	2
14	10420144	Washer φ8*φ25*3	2	2	2	2
15	10420030	Hex Bolt M16*40	12	12	12	12
16	10201114	Lock Washer φ20	8	8	8	8
17	10209128	Washer φ20	8	8	8	8
18	11460055	Offside Platform	1	0	0	0
	11460026		0	1	0	0
	11460026		0	0	1	0
	11460055		0	0	0	1
19	10476015	Hex Bolt M10*150	4	4	4	4
20	10420145	Oil-water Separator AFR-2000	1	1	1	1
21	10420146	Straight Fitting for Air Line	1	1	1	1
22	10209009	Cap Head Bolt M6*8	8	8	8	8
23	10420076	90° Fitting for Air Line 6*8	1	1	1	1
24	10420159	Straight Fitting for Air Line 6*8	1	1	1	1
25	11420160	Fixing plate of Manual Control Valve	1	1	1	1
26	10420161	Self locking nut	2	2	2	2
27	10420162	Manual Control Air Valve	1	1	1	1
28	10420163	Straight Fitting for Air Line 6*4	1	1	1	1
29	10420148	Washer φ4	4	4	4	4
30	10420164	Cap Head Bolt M4*30	2	2	2	2
31	071102	Manual power unit	1	1	1	1
32	10209005	Self locking nut M8	14	14	14	14
33	10209004	Rubber Ring φ8*20*3	4	4	4	4
34	10209003	Hex Bolt M8*25	4	4	4	4
35	11460028	Drive-in ramp	2	0	2	0
	11470003A		0	2	0	2
36	11610667	Roller for Drive-thru Ramp	4	4	4	4

Item	Part#	Description	PRO-14	PRO-14A	PRO-14E	PRO-14AE
37	11620043	Roller pin	4	4	4	4
38	10209010	Snap ring $\phi$ 10	8	8	8	8
39	10420156	Protecting Rubber Ring $\phi$ 24	1	1	1	1
40	10420045	Washer $\phi$ 6	20	20	20	20
41	10420004	Pin for Drive-in Ramp	2	2	2	2
42	10420005	Fixing Bolt M5*8	4	4	4	4
43	10460501	Parts box	1	0	1	0
	10470501		0	1	0	1
44	11420031-1	Tire Stop Plate	2	2	2	2
45	10201005	Split pin $\phi$ 4*50	1	1	1	1
46	10201090	Shim (1mm)	20	20	20	20
	10620065	Shim (2mm)	20	20	20	20
47	10209056	Self locking nut M10	4	4	4	4
48	11420217	Cable Limit Pin	4	4	4	4
49	11430004	Turn plate cover	0	2	0	2
50	11520037	Split pin	0	4	0	4
51	11450003	Slip Plate	0	2	0	2
52	10420157	Steel Ball Set	0	60	0	60
54	11460029	Fixing Ring For Oil Cylinder	1	1	1	1
55	10460030	Cylinder	1	1	1	1
56	11430622	Cable connecting plate	1	1	1	1
57	10420014	Hex Nut M27	1	1	1	1
58	10420016B	Protective hose $\phi$ 40*2*1500mm	1	1	1	1
59	10420158	Turnplate	0	2	0	2
60	10460066	No.① Cable	1	1	0	0
	10460087		0	0	1	1
61	10460069	No.② Cable	1	1	0	0
	10460090		0	0	1	1
62	10460067	No.③ Cable	1	1	0	0
	10460088		0	0	1	1
63	10460068	No.④ Cable	1	1	0	0
	10460089		0	0	1	1
64	10420166	90° Fitting 6*4	1	1	1	1
65	11420243	Straight Fitting	1	1	1	1
66	10460060	Oil Hose(straight+90°)	1	1	0	0
	10460091		0	0	1	1
67	10420120	Extended Straight Fitting (with Nut)	1	1	1	1
68	10460038	Oil Hose(double straight)	1	1	1	1
69	10209060	90° Fitting For Hydraulic Power Unit	1	1	1	1
70	10420095	Straight Fitting screw thread	1	1	1	1
71	10420245	Fitting	1	1	1	1
72	10420247	Compensation Valve	1	1	1	1
72A	10201020	90° Fitting	1	1	1	1
73	10420124	T-Fitting For Air Line	2	2	2	2
74	10420242	T-Fitting	1	1	1	1
75	10420241	Straight Fitting	1	1	1	1
76	10476007	Oil Return Hose $\phi$ 6* $\phi$ 4*6680mm black	1	1	0	0
	10460092	Oil Return Hose $\phi$ 6* $\phi$ 4*7275mm black	0	0	1	1

Item	Part#	Description	PRO-14	PRO-14A	PRO-14E	PRO-14AE
76A	10460013	Black Air Line $\phi 6 \times \phi 4$	1	1	0	0
	10460094	Black Air Line $\phi 6 \times \phi 4 \times 8900\text{mm}$	0	0	1	1
77	10420167A	Black Air Line $\phi 8 \times \phi 6 \times 460\text{mm}$	1	1	1	1
78	11480033	Turnplate adjusting block $\phi 8 \times \phi 6 \times 460\text{mm}$	0	4	0	4
79	11480045	Turnplate adjusting block $483 \times 35 \times 35$	0	4	0	4
80	11440082	Turnplate adjusting block $483 \times 141 \times 50$	0	4	0	4
81	11476635	Pulley	4	4	4	4
82	10476024	Washer for Pulley $2.5 \times 90 \times 90$	8	8	8	8
83	10476014	Hex nut M22	8	8	8	8
84	11420007	Fixing plate against rollover	4	4	4	4
85	11440090	Limit rod	0	4	0	4

#### 4.1 CROSS BEAM EXPLODED VIEW (10460063)

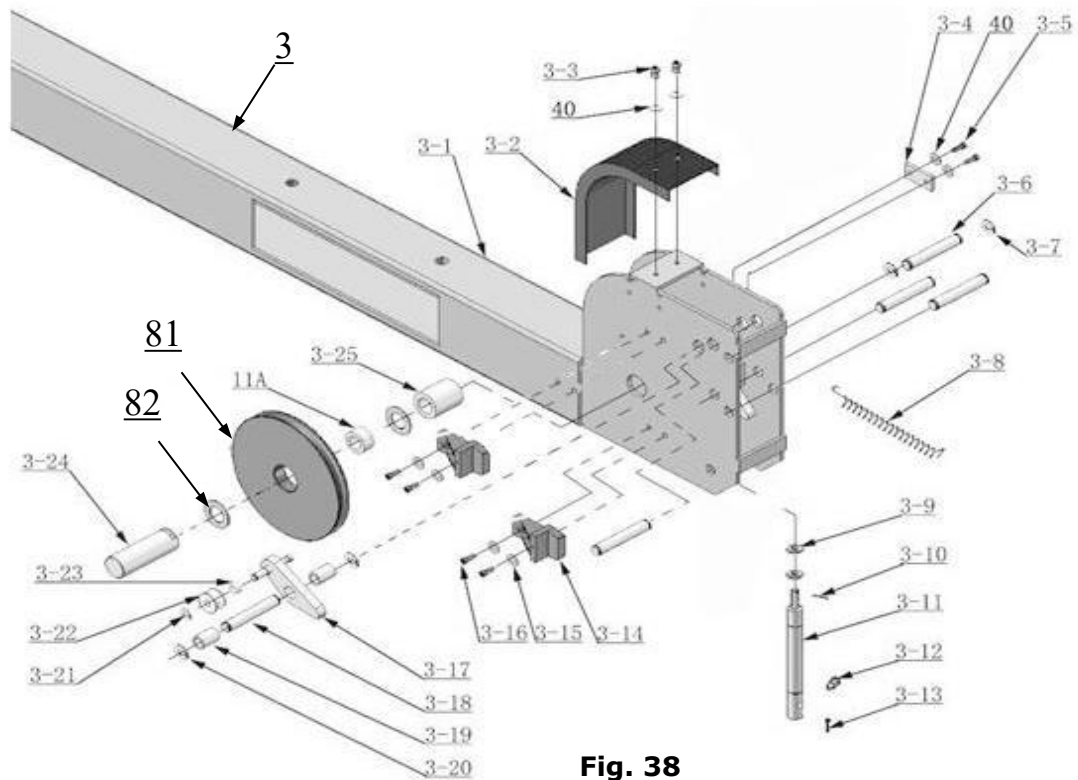


Fig. 38

Parts list For Cross Beam				
Item	Part#	Description	Qty	Note
3-1	11460064	Front Cross Beam	2	
3-2	10460043	Pulley Safety Cover	4	
3-3	10209009	Cap Head Bolt M6*8	8	
3-4	11420044	Limit Plate	4	
3-5	10420138	Socket Bolt M6*16	8	
3-6	11420038	Pin $\phi 16$	12	
3-7	10420037	Snap Ring $\phi 16$	24	
3-8	10420033	Spring	4	
3-9	10209021	Hex Nut M10	8	
3-10	10420049	Split Pin $\phi 2 \times 16$	4	

Item	Part#	Description	Qty	Note
3-11	10420048	Air Cylinder	4	
3-12	10420047	Fitting for Air Cylinder	4	
3-13	10420046	Split Pin $\phi 4 \times 30$	8	
3-14	10420042	Plastic Slider	16	
3-15	10209033	Washer $\phi 8$	40	
3-16	10420043	Socket Bolt M8*20	32	
3-17	10420175	Slack-cable safety lock (left & right )	Each 2	
3-18	10420171	Pin $\phi 19$	8	
3-19	10420172	Pin Bush For Slack-cable safety lock	8	
3-20	10206019	Snap Ring $\phi 19$	16	
3-21	10209010	Snap Ring $\phi 10$	4	
3-22	10420035	Tension Pulley	4	
3-23	11420174	Spacer	4	
3-24	11476026	Pulley Pin	4	
3-25	11460076	Pulley shaft sleeve	4	

#### 4.2 CYLINDERS EXPLODED VIEW (10460030)

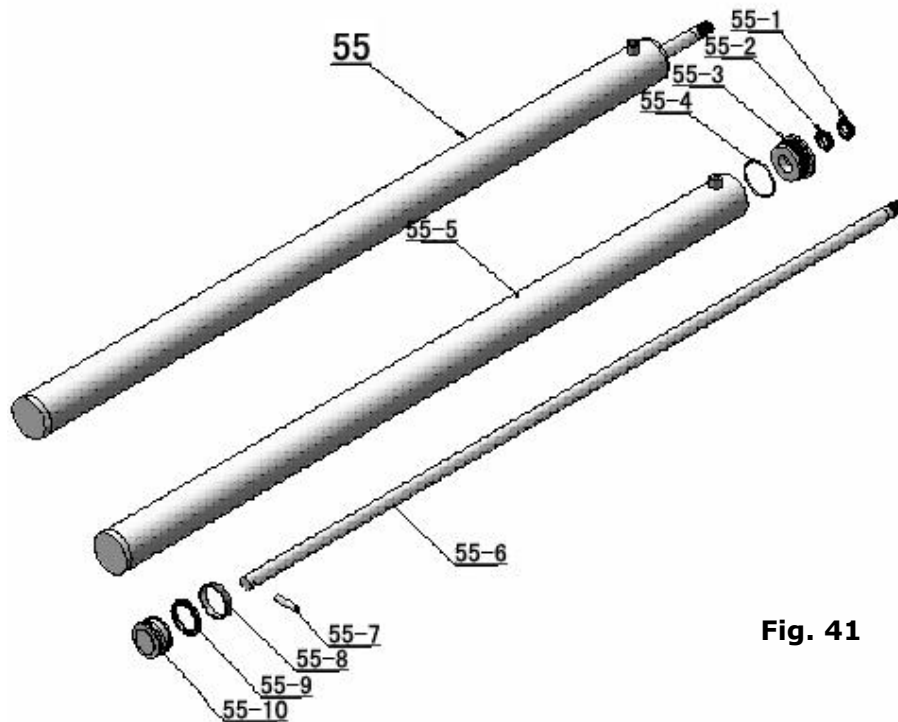


Fig. 41

Parts list For Cylinder				
Item	Part#	Description	Qty	Note
55-1	10420059	Dust Ring	1	
55-2	10420060	Y- Ring IDI	1	
55-3	11460046	Head Cap	1	
55-4	10460047	O- Ring	1	
55-5	11460048	Bore Weldment	1	
55-6	11420064	Piston Rod	1	
55-7	11460050	Pin	1	
55-8	10460051	Support Ring	1	
55-9	10460052	Y- Ring OSI	1	
55-10	11460053	Piston	1	

### 4.3 POWER UNIT EXPLODED VIEW (071102)

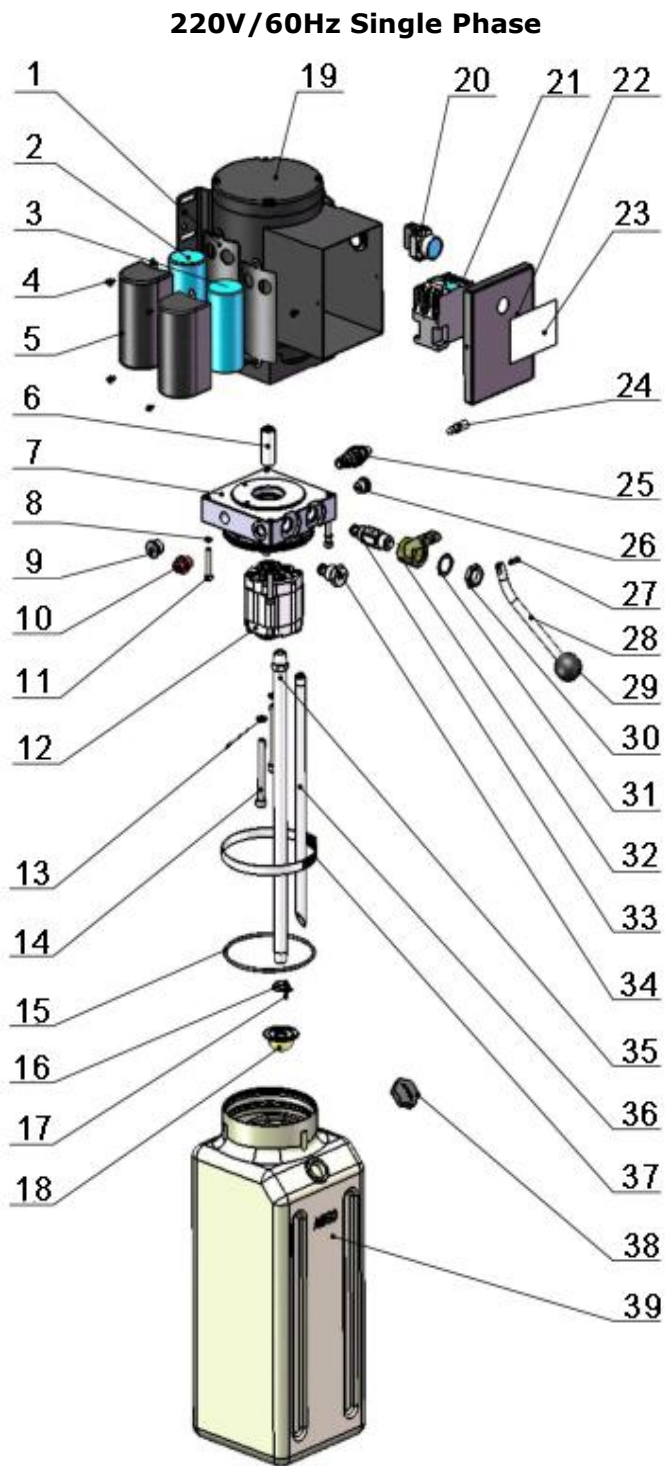



Fig.42

**Parts list for 220V/60Hz, Single Phase**

<b>Item</b>	<b>Part#</b>	<b>Description</b>	<b>Qty</b>
1	81400180	Rubber Pad	2
2	81400250	Starting capacitor	1
3	81400200	Running capacitor	1
4	10420148	Cap Head Bolt with washer	4
5	81400066	Cover of Motor Terminal Box	2
6	81400363	Motor Connecting Shaft	1
7	80101013	Manifold block	1
8	10209149	Washer	4
9	81400276	Iron plug	1
10	81400259	Red rubber plug	1
11	85090142	Socket bolt	4
12	81400280	Gear pump	1
13	10209034	Washer	2
14	81400295	Socket bolt	2
15	81400365	O ring	1
16	10209152	Ties	1
17	85090167	Magnet	1
18	81400290	Filter net	1
19	81400413	Steel Motor	1
20	10420070	Push button	1
21	41030055	AC connector	1
22	81400287	Motor terminal box cover	1
23	71111216	AMGO power unit label	1
24	81400560	Throttle valve	1
25	81400266	Relief valve	1
26	81400284	Inner hex iron plug	1
27	10720118	Elastic pin	1
28	81400451	Release valve handle	1
29	10209020	Plastic ball for release handle	1
30	81400421	Release valve nut	1
31	81400422	Shim	1
32	81400449	Valve Seat(Low)	1
33	81400567	Release Valve	1
34	81400566	Check Valve	1
35	81400366	Oil suction pipe	1
36	81400289	Oil return pipe	1
37	81400364	Clamp(stainless steel)	1
38	81400263	Oil tank cap	1
39	81400319	Oil tank	1



### Illustration of hydraulic valve for power unit

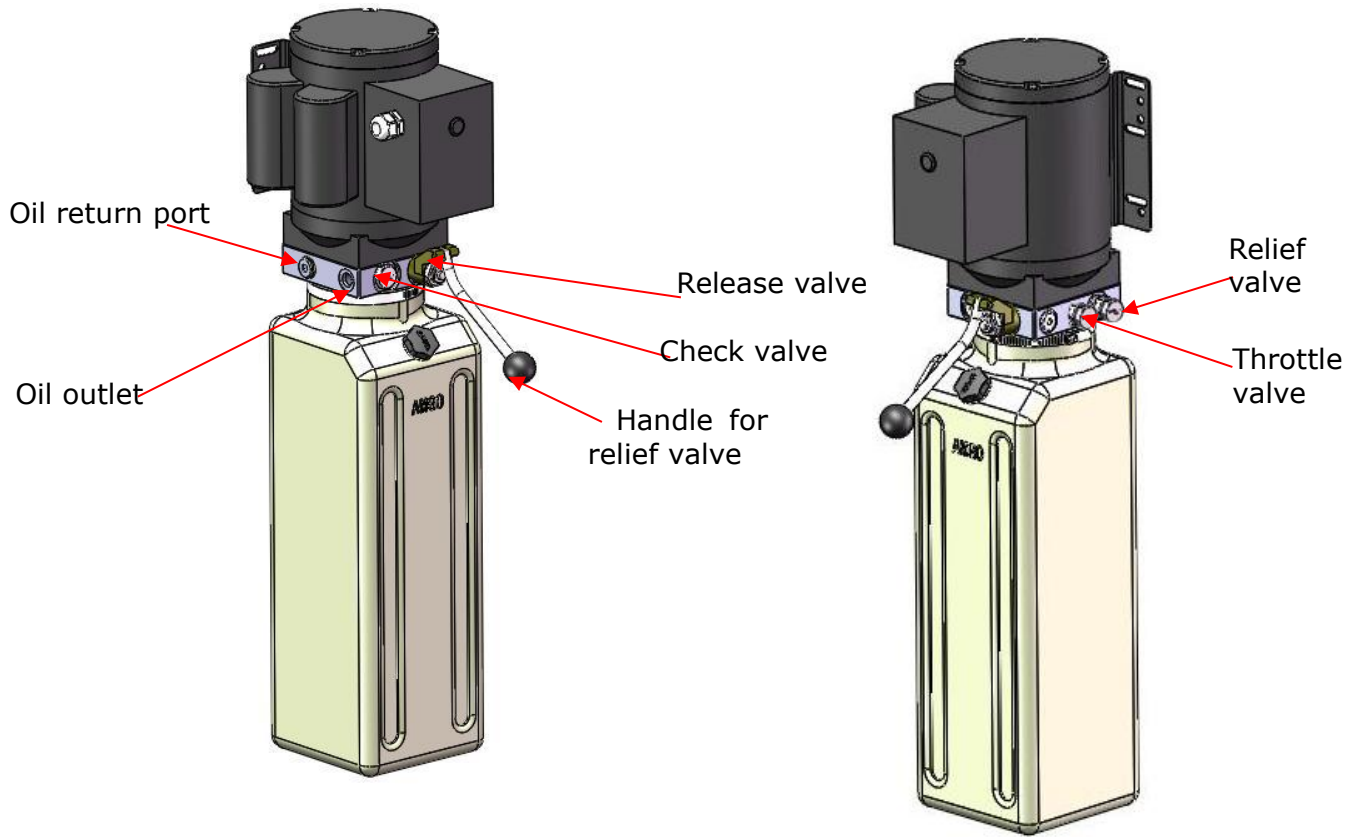


**Fig.43**

## V. TEST RUN

1. Fill the reservoir with approximately 14L Hydraulic Oil (**Note:** In consideration of Power Unit's durability, please use **Hydraulic Oil 46#**).
2. Press the push button , the Cables will be strained. Check whether the Cables match the Pulley. Make sure the Cables are not across.
3. Press the Handle of release valve to lock the Cross-beam to the safety ladders, and then adjust the platforms to be level by adjusting the nuts of Safety Ladders.
4. Adjust the cable fitting Hex nuts to make platforms and four safety locks work synchronously. You need to run the lift up and down for several times, meanwhile do the synchronous adjustment till the four Safety Devices can lock and release at the same time.
5. Adjust the clearance between the post and the plastic slider of Cross-beam to about 2mm, and then tighten the fixing nut of slider.
6. After finishing the above adjustment, test running the lift with load. Run the lift with Platforms in low position first, make sure the Platforms can rise and lower synchronously and the Safety Device can lock and release synchronously. And then test run the lift to the top completely. If there are anything improper, repeat the above adjustment.

**Circuit Diagram of Hydraulic System**

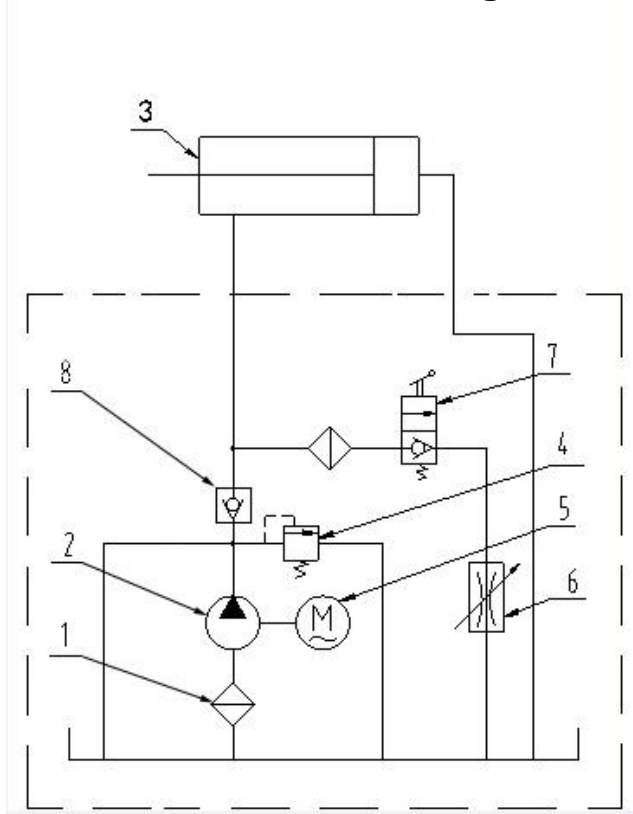

**N  
O  
T  
E**

1. Filter
2. Gear pump
3. Cylinder For Four-post lift
4. Relief Valve
5. Motor
6. Throttle Valve
7. Release Valve
8. Check Valve

**Fig. 44**

## **VI. OPERATION INSTRUCTIONS**

### **To lift vehicle**

1. Keep clean of environment near the lift;
2. Drive vehicle to the Platform and put on the brake;
3. Turn on the power and press the push button, raise the lift to the working position;  
**Note: make sure the vehicle is steady when the lift is raised.**
4. Press the Handle of release valve to lock the lift in the safety position. Make sure the Safety device is locked at the same height.

### **To lower vehicle**

1. Be sure the clearance of around and under the lift, only leaving operator in lift area;
2. Press the push button , the lift will be raised for 3-5 seconds, and then press the button of Manual-controlled air valve by hand to make sure the safety device released, press the handle of release valve by the other hand then the lift starts being lowered automatically;
3. Drive away the vehicle when the lift is lowered to the lowest position.
4. Turn off the power.

## **VII. MAINTENANCE SCHEDULE**

### **Monthly:**

1. Re-torque the anchor bolts to 150 Nm;
2. Lubricate cable with lubricant;
3. Check all cable connection, bolts and pins to insure proper mounting;
4. Make a visual inspection of all hydraulic hoses/lines for possible wear or leakage;
5. Lubricate all Rollers, Safety devices with 90wt. gear oil or equivalent.

**Note: All anchor bolts should take full torque. If any of the bolts does not function for any reason, DO NOT use the lift until the bolt has been replaced.**

### **Every six months:**

1. Make a visual inspection of all moving parts for possible wear, interference or damage.
2. Check and adjust as necessary, equalizer tension to insure level lifting.
3. Check the vertical of columns.

**Oil cylinder maintenance:**

In order to extend the service life of the oil cylinder, please operate according to the following requirements.

1. Recommend to use N46 anti-wear hydraulic oil.
2. The hydraulic oil of the lifts should be replaced regularly during using.  
Replace the hydraulic oil 3 months after the first installation, Replace the hydraulic oil once a year afterwards.
3. Make at least one full trip raising and lowering per day. For exhausting the air from the system, which could effectively avoid the corrosion of the cylinder and damage to the seals caused by presence of air or water in the system.
4. Protect the outer surface of the oil cylinder's piston rod from bumping and scratching, and timely clean up the debris on the oil cylinder dust-ring and the piston rod.

## VIII. TROUBLE SHOOTING

TROUBLE	CAUSE	REMEDY
Motor does not run	<ol style="list-style-type: none"> <li>1. Start Button does not work</li> <li>2. Wiring connections are not in good condition</li> <li>3. Motor burned out</li> <li>4. AC contactor burned out</li> <li>5. Height limit switch is damaged</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace start button</li> <li>2. Repair all wiring connections</li> <li>3. Repair or replace motor</li> <li>4. Replace AC contactor</li> <li>5. Replace</li> </ol>
Motor runs but the lift is not raised	<ol style="list-style-type: none"> <li>1. Motor runs in reverse rotation</li> <li>2. Release valve in damage</li> <li>3. Gear pump in damage</li> <li>4. Relief valve or check valve in damage</li> <li>5. Low oil level</li> </ol>	<ol style="list-style-type: none"> <li>1. Reverse two power wire</li> <li>2. Repair or replace</li> <li>3. Repair or replace</li> <li>4. Repair or replace</li> <li>5. Fill tank</li> </ol>
Lift does not stay up	<ol style="list-style-type: none"> <li>1. Release valve out of work</li> <li>2. Relief valve or check valve leakage.</li> <li>3. Cylinder or fittings leaks</li> </ol>	Repair or replace
Lift raises too slow	<ol style="list-style-type: none"> <li>1. Oil line is jammed</li> <li>2. Motor running on low voltage</li> <li>3. Oil mixed with Air</li> <li>4. Pump leaks</li> <li>5. Overload lifting</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the oil line</li> <li>2. Check electrical system</li> <li>3. Fill tank</li> <li>4. Replace Pump</li> <li>5. Check load</li> </ol>
Lift cannot lower	<ol style="list-style-type: none"> <li>1. Safety device are in activated</li> <li>2. Release valve damaged</li> <li>3. Air Cylinder damaged</li> <li>4. Air leaks</li> </ol>	<ol style="list-style-type: none"> <li>1. Release the safeties</li> <li>2. Replace or repair</li> <li>3. Replace the cylinder</li> <li>4. Clean the air line</li> </ol>

## IX. LIFT DISPOSAL:

When the car lift cannot meet the requirements for normal use and needs to be disposed, it should follow local laws and regulations.



## **AMGO HYDRAULIC CORPORATION**

1931 Jo Rogers Blvd, Manning, South Carolina, USA

Tel: (803) 505-6410  
Fax: (803) 505-6410

Manual Part No.: 72246102  
Revision Date: 2022/05